

Blaze King

QUALITY HEARTH PRODUCTS

INSTALLATION AND OPERATING INSTRUCTIONS

TUSCANY FREESTANDING DIRECT VENT HEATER MODEL 6003T

Dealer:
Installer:
Phone:
Installation Date:
Serial Number:



INSTALLER: PLEASE LEAVE THIS MANUAL WITH THE CUSTOMER
CUSTOMER: PLEASE KEEP MANUAL FOR FUTURE REFERENCE

WARNING: If the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury may result.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

MANUFACTURED IN CANADA BY:

Valley Comfort Systems Inc.
1290 Commercial Way
Penticton, BC V2A 3H5
Ph# 1-250-493-7444
Email sales@blazeking.com



Intertek

CERTIFIED FOR CANADA AND USA

MANUFACTURED IN USA BY:

Blaze King Industries
146 A Street
Walla Walla, WA. 99362
Ph# 1-509-522-2730
Email ussales@blazeking.com

Pour la version française de nos manuels S.V.P. vous référez à notre site web: www.blazeking.com

Table Of Contents

Description.....	Page #
Listing and Codes	3
Copy of certification label	4
Lighting Instructions	5
Specifications	6
High Altitude	6
Warnings, Caution and Safety Notices	7
Installation Instructions Safety	8
Planning Your Installation	8
Clearances To Combustibles.....	9
Rear Vent—Snorkel Installation.....	9
Simpson Duravent Parts List	10
American Metal & Security Parts List.....	11
Selkirk Direct-Temp™ Instructions	12
Top Vent - Venting Diagrams	13
Horizontal Termination Installation.....	15
Vent Restrictor Use And Installation	16
Vertical Termination Installation.....	16
Basements Installations.....	16
Through Roof Termination.....	17
45° Elbow Offset Information	18
Termination Location	19
Gas Supply	20
Aeration Adjustment	21
Thermostat	22
Log set Installation.....	22
Wiring Diagrams	23
Operating Instructions Pre Check	24
Final Check.....	25
Shut Down	25
Fan	26
Cold Weather Operation	26
Glass Cleaning—White Mineral Deposits	26
Maintenance Gas Valve Replacement.....	27
Viewing Glass Replacement	28
Door.....	28
High Altitude Chart.....	29
Optional Conversion Kits.....	30
Warranty	31-34
Troubleshooting	35-36
Replacement Parts List.....	36
Pilot Conversion.....	37
Notes / Service History	38

Your Blaze King Stove has its own personal serial number. No two stoves are alike. The serial number is located on the stove label inside the door on the left hand side of the stove.

Mail your warranty card TODAY, and SAVE your RECEIPT. This card is included with the accessory package inside each firebox.

In order to receive full warranty coverage and to expedite service, Blaze King recommends that you save your receipt and attach it to this page.

By doing this you will have all the necessary information in the event that your stove may need warranty service.

Dealer _____

Installer _____

Phone _____

Installation Date _____

Serial Number _____

Introduction

Thank you for purchasing a *Blaze King* stove and welcome to the *Blaze King* family. Your new *Blaze King* will give you many hours of warmth and comfort. Please make sure you take a few minutes to read this owner's manual. It explains the steps required to safely assemble, install, operate, and maintain your new appliance. Proper installation, operation and maintenance will keep your *Blaze King* burning for years to come.

The *Tuscany* is one of the most advanced free standing gas stoves on the market. It is designed using the latest technology and manufactured to our highest quality standards.

Some of the many features are:

- ◆ Compact and easy to install.
- ◆ Adjustable flame control for varying flame aesthetics and heat output.
- ◆ Gas valve with remote capability, i.e. Standard wall mounted room thermostat or optional hand held remote control (check with your local dealer for availability).
- ◆ Heat activated convection fan with variable speed controller.
- ◆ Standard simulated brick firebox lining.
- ◆ Certified as a heating appliance. Therefore, the *Tuscany* is suitable for continuous operation for zone heating.
- ◆ Realistic three dimensional glowing flames with glowing two piece log set viewed through high temperature ceramic glass.
- ◆ Heavy-duty construction for long life and durability.
- ◆ Comprehensive warranty policy.



Listing & Codes

The *Blaze King Tuscany* is listed and certified for installation in the U.S.A. and Canada under the following standards:

- ANSI Z21.88b-2007/CSA 2.33b-2007, *Vented Gas Fireplace Heater.*
- CAN/CGA-2.17-M91, *Gas-Fired Appliances for Use at High Altitudes*

Please contact *Blaze King* if you have any questions regarding the certification of this appliance.

This appliance, when installed must be electrically grounded in accordance with local codes or, in the absence of local codes the *National Electrical code ANSI/NFPA 70* or the *Canadian Electrical Code, CSA C22.1*.

This appliance may be installed in an aftermarket, permanently located, manufactured home (USA only) or mobile home, where not prohibited by local codes. This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.

The installation must conform with local codes or, in the absence of local codes, with the *National Fuel Gas Code, ANSI Z223.1/NFPA 54*, or the *Natural Gas and Propane Installation Code, CSA B149.1*.

Note: A copy of the certification label is provided here for your review. Due to constant up-grades it is possible that the information shown here may not coincide with the label as attached to the unit. In the event of a discrepancy between the labels, the label on the unit is considered as the correct one.



Intertek

Certified for U.S. and Canada
Certifié pour le Canada et les Etas-Unis

CONTEMPORARY / TUSCANY by **BLAZE KING**

Listed Vented Gas Fireplace Heater

Serial No. -

This stove is factory equipped for 0-1370 m (0-4,500 ft)
Cette chaufferette est equipe en usine pour une elevation de 0 à 1370m (0-4500 pi)

ANSI Z21.88 - 2009/CSA 2.33-2009, "Vented Gas Fireplace Heaters", CAN/CGA-2.17-M91 "Gas-Fireplaces For Use At High Altitudes."

Models: Contemporary 6003 / Tuscany 6003T rear and top vent appliances	<input type="checkbox"/> NATURAL GAS / Gaz naturel	<input type="checkbox"/> LP GAS / Gaz propane
Orifice (DMS) 0-1370 m 0-4,500 ft Alt. Orifice (DMS) 0-1370 m 0-4,500' d'altitude	37	53
Input rating (BTU/hr / kw) 0-1370m 0-4,500 ft Alt. Evaluation de la consommation (BTU/hr / kw) 0-1370m 0-4500' d'altitude	27,000 / 7.9	27,000 / 7.9
Minimum Input (BTU/hr / kw) Consommation minimale (BTU/hr / kw)	19,000 / 5.5	20,000 / 5.8
Manifold Pressure (in w.c. / kPa) Collecteur de pression (in w.c. / kPa)	3.5 / 0.87	10.0 / 2.49
Manifold Pressure Lo setting (in w.c. / kPa) Collecteur de pression à bas rendement (in w.c. / kPa)	1.6 / 0.4	6.3 / 1.57
Minimum Inlet Pressure (in w.c. / kPa) Entree de pression minimale (in w.c. / kPa)	5.0 / 1.24	12.0 / 3.00

This appliance must be installed in accordance with local codes if any: if not follow ANSI Z223.1 and CAN 1-B149 Gas Appliance Installation Code.
Cet appareil doit être installé selon les normes locales (si existantes): si non, suivre le code d'installation pour appareils au gaz ANSI Z223.1 et CAN1-B149.
VENTED GAS FIREPLACE-NOT FOR USE WITH SOLID FUEL. / NE PAS UTILISER AVEC DES COMBUSTIBLES SOLIDES
FOR USE WITH GLASS DOORS CERTIFIED WITH THE APPLIANCE ONLY.
ALSO FOR USE IN OEM / MOBILE (MANUFACTURED) HOMES AFTER HOME IS ON SITE. Convertible for use with natural gas or propane as follows:
For natural gas when equipped with No. #37 orifice For propane when equipped with No. #53 orifice
MAY BE INSTALLED IN A BEDROOM OR SITTING ROOM WHEN INSTALLED WITH A LISTED THERMOSTAT CONTROL IN CANADA. INSTALL AS PER ANSI Z223.1 IN THE USA.
AU CANADA CET A APPAREIL PEUT ETRE INSTALLE DANS UNE CHAMBRE A COUCHER OU UNE CHAMBRE MEUBLEE S'IL EST INSTALLE AVEC UNE COMMANDE DE THMOSTAT HOMOLOUEE. AUX ETATS-UNIS L'INSTALLER SELON LA NORME ANSI Z223.1

MINIMUM CLEARANCES TO COMBUSTIBLES / ESPACES MINIMUM REQUIS ENTRE L'APPAREIL ET DES MATÉRIAUX COMBUSTIBLES.

Unit to Sidewall / De l'appareil au mur latéral	-	10.5" (266 mm)
Floor / Sol	-	Unprotected (in Canada & USA) / Sans protection (au Canada & USA)
Back wall to unit back	-	4" (100 mm)
Corner to wall (45°)	-	2" (50 mm)
Vent pipe (horizontal) / Tuyau d'emission	-	2" (50 mm)
Vent pipe (vertical) / Tuyau d'emission	-	1" (25 mm)

Electrical Rating: 115 Volts, 0.7 Amp, 60 Hz / Consommation électrique: 115 Volts, 0.7 ampère, 60Hz
DANGER: Risk of electrical shock. Disconnect power before servicing unit. Do not route power cord beneath heater.
DANGER: Rique de choc électrique. Débrancher l'appareil avant de le reviser. Ne pas faire passer le fil d'alimentation électrique dessous la chaufferette.


This appliance is only for use with the type of gas indicated the rating plate and may be installed in an aftermarket, permanently located, manufactured (mobile) home where not prohibited by local codes. See owners manual for details. This appliance is not convertible for use with other gases, unless a certified kit is used.
This vented gas fireplace is not for use with air filters.

CAUTION: HOT WHILE IN OPERATION. DO NOT TOUCH. SEVERE BURNS MAY RESULT. KEEP CHILDREN, CLOTHING FURNITURE, GASOLINE AND OTHER LIQUIDS HAVING FLAMMABLE VAPORS AWAY.
Keep burner and control compartment clean. See installation and operating instructions accompanying appliance.

CAUTION: DO NOT OPERATE THE APPLIANCE WITH THE GLASS REMOVED, CRACKED OR BROKEN. REPLACEMENT OF THE PANEL(S) SHOULD BE DONE BY A LICENSED OR QUALIFIED SERVICE PERSON.

MINIMUM ALCOVE CLEARANCES

A	Side Wall to unit side	11" (275mm)
B	Back wall to unit back	4" (100mm)
C	Corner to wall	2" (50mm)
Minimum Alcove Height		46" (1150mm)

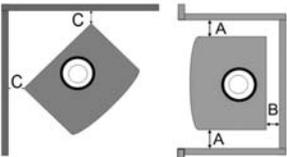

Manufacture Date: / Date de fabrication:

<input type="checkbox"/> 2008	<input type="checkbox"/> 2009	<input type="checkbox"/> 2010	<input type="checkbox"/> 2011
<input type="checkbox"/> JAN	<input type="checkbox"/> FEB	<input type="checkbox"/> MAR	<input type="checkbox"/> APRIL / AVRIL
<input type="checkbox"/> MAY / MAI	<input type="checkbox"/> JUNE / JUIN	<input type="checkbox"/> JULY / JUIL	<input type="checkbox"/> AUGUST / AOÛT
<input type="checkbox"/> SEPT	<input type="checkbox"/> OCT	<input type="checkbox"/> NOV	<input type="checkbox"/> DEC

Manufactured in U.S.A. By: **Blaze King Industries**
Fabriqué au U.S.A. par: 146 A Street, Walla Walla, WA 99362 U.S.A.

Manufactured in Canada By: **Valley Comfort Systems Inc.**
Fabriqué au Canada par: 1290 Commercial Way, Penticton, B.C. V2A 3H5 Canada

P/N 0091ef Oct 09

Lighting Instructions

FOR YOUR SAFETY, READ BEFORE LIGHTING

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance has a pilot which is lit with a pushbutton piezo lighter. When lighting the pilot, follow these instructions exactly.
- B. BEFORE LIGHTING, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS:


 - Do not try to light any appliance.
 - Do not touch any electric switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas suppliers instructions.
 - If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it; call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

LIGHTING INSTRUCTIONS

1. STOP! Read the safety information above.
2. Set the thermostat to the lowest setting.
3. Valve Controls are accessed by opening the panel on the right hand side of the pedestal.
4. Set the manual burner switch (located on the back of the unit) to the "OFF" position.
5. Push in gas control knob slightly and turn clockwise  to "OFF".
6. Open Viewing Door. Wait five (5) minutes to clear out any gas. If you then smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
7. Turn control knob counterclockwise  to "PILOT" position.
8. Depress control knob and push in Piezo ignitor button. Once pilot ignites, continue to hold the control knob in for about one (1) minute after the pilot is lit. Release knob and it will pop back up. Pilot should remain lit. If it goes out, repeat steps 6 through 8.
 - If knob does not pop up when released, stop and immediately call your service technician or gas supplier.
 - If the pilot will not stay lit after several tries, turn the gas control knob to "OFF" and call your service technician or gas supplier.
9. Close Viewing Door. Turn gas control knob counter clockwise  to "ON". Turn on all electric power to the appliance. Set thermostat to the desired setting or set the manual burner switch to the "ON" position.

TO TURN OFF GAS TO THE APPLIANCE

1. Set the thermostat to the lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Push in gas control knob slightly and turn clockwise  to "OFF". Do not force.

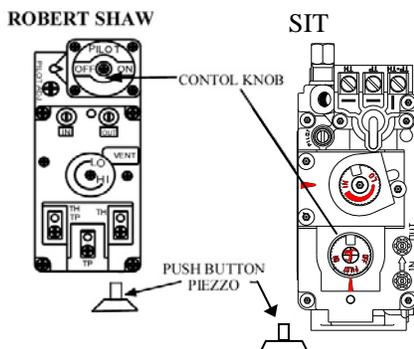

WARNING:

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to the owner's information manual provided with this appliance. For assistance or additional information, consult a qualified installer, service agency or your gas supplier

P/N 0092

Specifications

MODEL <i>Tuscany</i>	Natural Gas (NG)	Propane (LP)
Manifold Pressure	1.6 - 3.5 in. w.c. (0.4 - 0.87kPa)	6.3 - 10.0 in. w.c. (0.87 - 2.74kPa)
Min. Supply Pressure for Purpose of Input Adjustment	5 in. w.c. (1.24 kPa)	12.0 in. w.c. (3.0 kPa)
Max. Supply Pressure for Purpose of Input Adjustment	7.0 in. w.c. (1.8 kPa)	14.0 in. w.c. (3.5 kPa)
Orifice Size	37# DMS	53# DMS
Nominal Input Rating	27,000 BTU/hr	27,000 BTU/hr
Minimum Input Rating	19,000 BTU/hr	20,000 BTU/hr
Operating Efficiency (<i>fans off*</i>)	82%	82%
Altitude	0 - 4,500 ft. (0 - 1372 m)	0 - 4,500 ft. (0 - 1372 m)
Primary Air Opening	1/8 in (Minimum).	1/8 in (Minimum).
Electrical Rating	120 V.A.C. System	120 V.A.C. System
Circulating fan	Variable Speed	Variable Speed
Vent System	4" x 6-5/8"	4" x 6-5/8"
Log Set	Ceramic Fiber (2 Piece)	Ceramic Fiber (2 Piece)

* *Slightly Higher Efficiency may be obtained with fans on.*

HIGH ALTITUDE INSTALLATION

When installing this appliance over 4500 ft (1372 m) above sea level in Canada, the appliance must be properly de-rated and installed according to local codes. In the absence of local codes, install in accordance with CSA B149.1, in Canada. In the US for installations above 2000ft the appliance must be installed in accordance with the current National Fuel Gas Code, ANSI Z223.1/ NFPA 54 (see page 26).

Contemporary - Stove Dimensions	
WIDTH	29" / 737mm
HEIGHT	29" / 737mm
DEPTH	24" / 610mm

Warnings — Caution

IF THIS APPLIANCE IS NOT PROPERLY INSTALLED, A HOUSE FIRE OR EXPLOSION MAY RESULT. FOR YOUR SAFETY, FOLLOW THE INSTALLATION DIRECTIONS. CONTACT LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION REQUIREMENTS IN YOUR AREA. PLEASE READ THIS ENTIRE MANUAL BEFORE YOU INSTALL AND USE YOUR NEW APPLIANCE. FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT IN PROPERTY DAMAGE, BODILY INJURY OR DEATH.

Safe installation and operation always require common sense. We are also required by Canadian and ANSI safety standards to point out the following:

INSTALLATION AND REPAIR SHOULD BE DONE BY A QUALIFIED SERVICE PERSON. THE APPLIANCE SHOULD BE INSPECTED BEFORE USE AND AT LEAST ANNUALLY BY A PROFESSIONAL SERVICE PERSON. MORE FREQUENT CLEANING MAY BE REQUIRED DUE TO EXCESSIVE LINT FROM CARPETING, BEDDING MATERIAL, ETC...

IT IS IMPERATIVE THAT CONTROL COMPARTMENTS, BURNERS AND CIRCULATING AIR PASSAGEWAYS OF THE APPLIANCE ARE KEPT CLEAN.

DUE TO HIGH TEMPERATURES, THE APPLIANCE SHOULD BE LOCATED OUT OF TRAFFIC AREAS AND AWAY FROM FURNITURE AND DRAPERIES.

DO NOT USE THIS HEATER IF ANY PART HAS BEEN UNDER WATER. IMMEDIATELY CALL A QUALIFIED SERVICE TECHNICIAN TO INSPECT THE HEATER AND TO REPLACE ANY PART OF THE CONTROL SYSTEM AND ANY GAS CONTROL WHICH HAS BEEN UNDER WATER.

“WARNING” Do not operate appliance with the glass front removed, cracked or broken. Replacement of the glass should be done by a licensed or qualified service person.

YOUNG CHILDREN SHOULD BE CAREFULLY SUPERVISED WHEN THEY ARE IN THE SAME ROOM AS THE APPLIANCE.

CLOTHING OR OTHER FLAMMABLE MATERIALS SHOULD NOT BE PLACED ON OR NEAR THE APPLIANCE.

THE FLEXIBLE CORD PROVIDED MUST BE CONNECTED TO A LINE VOLTAGE ELECTRICAL SUPPLY.

ANY SAFETY SCREEN OR GUARD REMOVED FOR SERVICING A ROOM HEATER MUST BE REPLACED PRIOR TO OPERATING THE APPLIANCE.

NEVER VENT THE APPLIANCE INTO OTHER ROOMS OR BUILDINGS. THE APPLIANCE MUST BE VENTED TO THE OUTSIDE ONLY.

THIS APPLIANCE MUST NOT BE CONNECTED TO A CHIMNEY FLUE SERVING A SEPARATE SOLID-FUEL BURNING APPLIANCE.

CHILDREN AND ADULTS SHOULD BE ALERTED TO THE HAZARDS OF HIGH SURFACE TEMPERATURES AND SHOULD STAY AWAY TO AVOID BURNS OR CLOTHING IGNITION.

Natural gas & propane gas have odor additives for the purpose of leak detection through smell. This odor can fade with time. If the odor is reduced, it is possible to have a dangerous buildup of gas without your being able to smell it. If you are using any gas appliances in your home BKI recommends that you have one or more UL approved gas detectors installed in your home. They should be installed by a qualified gas installer for safety purposes.

Installation Instructions - Safety

GENERAL SAFETY (HOMEOWNER)

- To clean the stove, make sure the appliance is off and cold. Remove the logs and embers. **The logs must be handled with extreme care, they are fragile.** Use a vacuum to clean burner and air openings in the bottom and back of the appliance. Carefully replace the logs and embers.
- Fire Extinguisher: Every home should have at least one fire extinguisher. An approved Class A-B-C extinguisher should be mounted on the wall near an exit and close to the appliance, but not so close that accessibility to the extinguisher could be blocked by a fire. Your local Fire Department can advise you concerning the most appropriate location.
- Smoke Detectors & Carbon Monoxide Detectors: Install at least one smoke detector on each floor of your home to ensure your safety. It should be located away from the gas appliance and close to the sleeping areas. Follow the smoke detector manufacturers placement installation and maintenance instructions. Your local Fire Department may provide assistance in selecting smoke detectors and CO-detectors. It is strongly recommended, for your family's protection, that a CO-detector be placed in all homes that utilize gas in any form.

FOR THE INSTALLER

- 1) Wear gloves and safety glasses for protection.
- 2) Exercise extreme caution when using ladders or when on roof tops.
- 3) Be aware of electric wiring locations in walls and ceilings.
- 4) **Use a back support when doing any heavy lifting.**



VENTING SAFETY

- The appliance vent should be enclosed when installed in or passing through a living area, where children may come in contact with it.
- Only vent terminations specified may be used with this stove.
- Venting terminals shall not be recessed into a wall or siding.
- Ensure that the combustion air will be in the same pressure zone as the vent outlet.

PLANNING YOUR INSTALLATION

Please note the following key points regarding the location of your appliance:

- A sufficient gas pressure is required to supply the unit with a minimum inlet pressure
- Allow adequate accessibility clearances for servicing and proper operation.
- Allow adequate clearance to combustibles.
- Consider the termination location.
- A suitable power outlet is required to provide power to the fan.
- Ensure appliance has adequate combustion and ventilation air.

CLEARANCES TO COMBUSTIBLES

IMPORTANT: All clearances listed are the MINIMUM required and must be strictly followed.

This appliance is certified for installation on a solid combustible surface, such as a wood floor, vinyl or carpeting.

The following pages provide diagrams for safe clearances to combustibles.


Ensure, as in any installation, that structural members are not cut or weakened during installation .

When installing the appliance in a mobile or manufactured home, it must be securely anchored to the floor.
(Use kit # ZR8039)

Installation Instructions

CLEARANCES TO COMBUSTIBLES

MODEL TUSCANY		
A	Side Wall to unit side	11" (275mm)
B	Back wall to unit back	4" (50mm)
C	Corner to side wall	2" (100mm)

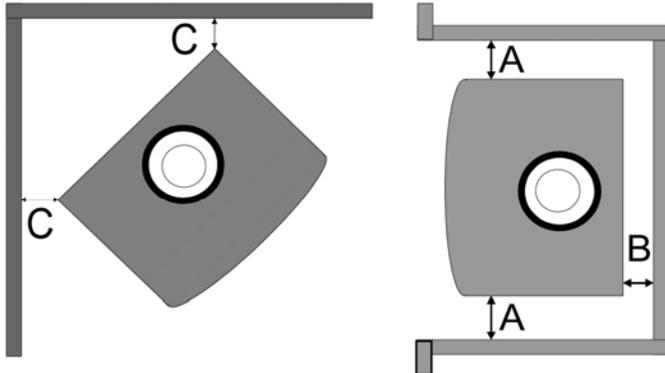

LOCATING YOUR STOVE

Minimum clearances listed above must be maintained. Also ensure that you have left clearance for servicing and that the proposed termination location is correct.

VENTING

IMPORTANT: This appliance's venting system is room sealed, which means that there should be no provision to allow room air to be used in the combustion process.

Note: Only venting systems listed in this manual may be used with the Tuscany. The Simpson DuraVent GS[®], American Metal Products and Security vent systems are listed for use with the Tuscany. See the next page for a full parts list.

PLANNING YOUR VENT INSTALLATION

This type of direct vent system may terminate in one of two ways: Vertical termination using a vent cap, or horizontally using a wall termination. There are limitations to the vertical and/or horizontal lengths. When calculating the length of the vent pipe from the outlet of the appliance to termination, allow for ceiling thickness, vertical rise in the attic or second story and sufficient vertical height above the roof.


Fire stops are required at each floor level the vent passes through.

When carrying out vertical installations that require 45° elbows add additional pipe to allow for the offset.

REAR VENT—SNORKEL TERMINATION


MINIMUM VERTICAL RISE	36" Using American Metal snorkel (part #4D36S)
MAXIMUM HORIZONTAL RUN	3 ft When using 36" Snorkel. One 45° elbow may be used for corner installs.

Installation showing 36" section and 36" Snorkel

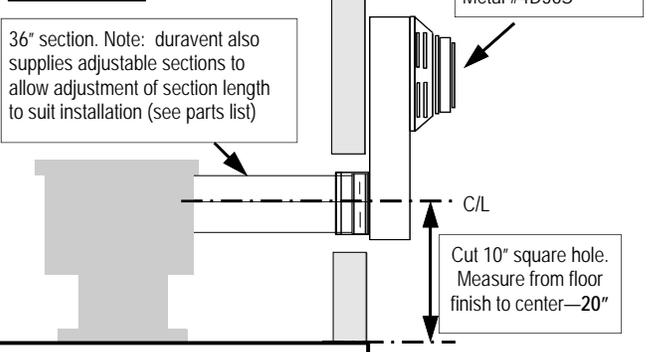

Follow venting manufacturer's instructions and adhere to all local codes, authorities and standards for your installation.

Corner install showing 45° elbow either straight off back of unit or in mid section with snorkel kit.

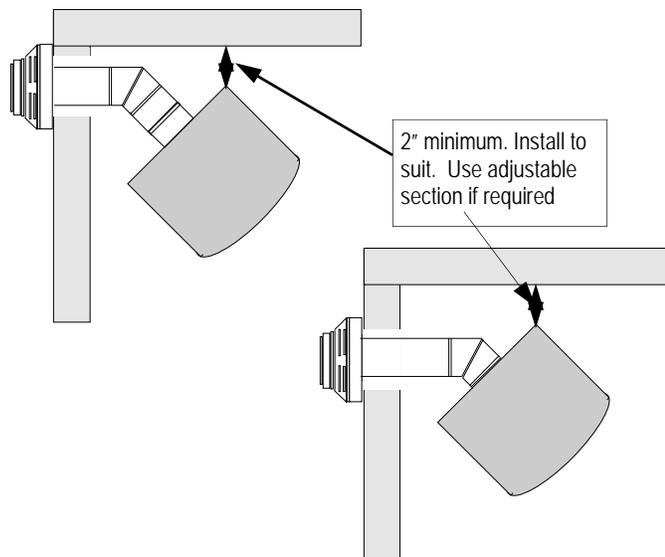

Installation Instructions

SIMPSON DURAVENT DIRECTVENT PRO / GS SYSTEM PARTS LIST		
Description	Part #	Old Part #
Horizontal Termination Kit - In Canada - Mandatory to add a wall thimble (46DVA-KHC.)	46DVA-KHA	971
Vertical Termination Kit	-	978
6" Pipe Length -Black	46DVA-06B	908B
6" Pipe Length -Galvanized	46DVA-06	908
8,5" Black Extension (3"-7")	46DVA-08AB	-
8,5" Galvanized Extension (3"-7")	46DVA-08A	-
9" Pipe Length-Black	46DVA-09B	907B
9" Pipe Length-Galvanized	46DVA-09	907
12" Pipe Length-Black	46DVA-12B	906B
12" Pipe Length-Galvanized	46DVA-12	906
16" Black Extension (3"-14.5")	46DVA-16AB	-
16" Galvanized Extension (3"-14.5")	46DVA-16A	-
24" Pipe Length-Black	46DVA-24B	904B
24" Pipe Length-Galvanized	46DVA-24	904
36" Pipe Length-Black	46DVA-36B	903B
36" Pipe Length-Galvanized	46DVA-36	903
48" Pipe Length-Black	46DVA-48B	902B
48" Pipe Length-Galvanized	46DVA-48	902
11"- 14 5/8" Adjustable Pipe Length-Black	-	911B
17"- 24" Adjustable Pipe Length-Black	-	917B
45° Elbow-Black	46DVA-E45B	945B, 945BG
45° Elbow-Galvanized	46DVA-E45	945, 945G
90° Elbow-Galvanized	46DVA-E90	990, 990G
90° Elbow-Black	46DVA-E90B	990B, 990BG
Vertical High Wind Termination Cap (must be used for all vertical terminations)	46 DVA-VCH	991
Horizontal. DV Termination with 1" return	-	984GL
Horizontal. Square Termination Cap	-	984
Horizontal. Square High Wind Termination Cap	46DVA-HC	985
Horizontal Round Termination Cap	46DVA-HRCS	-
Sconce Termination Cap	46DVA-HSC	-
Wall Thimble Cover—Support Box	46DVA-DC	940
Cathedral Ceiling Support Box	46DVA-CS	941
Brass Trim fro Ceiling Support Box	-	3951
Firestop Spacer	46DVA-FS	963
Flashing 0/12-6/12	46DVA-F6	943
Flashing 7/12-12/12	46DVA-F12	943S
Storm Collar	46DVA-SC	953
Vinyl Siding Standoff	46DVA-VSS	950
Wall Strap	46DVA-WS	988
Wall Pen Heat Shield (Wall Thimble)	46DVA-WT	942

AMERICAN METAL PRODUCTS COMPONENTS LIST	
Description	Part #
7" Pipe Length	4D7
12" Pipe Length	4D12
2' Pipe Length	4D2
3' Pipe Length	4D3
4' Pipe Length	4D4
4" - 10" Adjustable Length	4D12A
45° Elbow	4D45L
90° Elbow	4D90L
Vertical Termination	4DVC
Horizontal Termination	4DHC
Snorkel 36"	4D36S
Wall Thimble	4DWT
Wall Strap	4DWS
Firestop Support Plate	4DFSP
Faceplate, Ceiling Support / Wall Thimble	4DFPB
Roof Support	4DRSB
Storm Collar	4DSC
Standard Flashing	4DF
Steep Pitch Flashing	4DF12
Attic Insulation Shield	4DAIS12
SECURITY VENTING COMPONENTS LIST	
6" Pipe Length	SV4L6
12" Pipe Length	SV4L12
24" Pipe Length	SV4L24
36" Pipe Length	SV4L36
48" Pipe Length	SV4L48
6" Adjustable Length	SV4LA
12" Adjustable Length	SV4LA12
45° Elbow	SV4E45
90° Elbow	SV4E90
Wall Band	SV4BM
Insulated Attic Shield	SV4RSA
Wall Shield	SV4RSM
Fire stop	SV4BF
Adjustable Roof Flashing 1/12 — 7/12	SV4FA
Horizontal Termination	SV4CHC
Vertical Termination	SV4CGV

SELKIRK DIRECT-TEMP™ INSTRUCTIONS

INSTALLATION INSTRUCTION APPENDIX FOR BLAZE KING MODEL: 6003T-****-NT

Selkirk Model Direct-Temp™ direct venting system has now been added as an approved venting option by our safety certification organization, Intertek Testing Services / Warnock Hersey (ITS/WH), for the above referenced direct vent gas appliances.

When using Selkirk Direct-Temp™ as an alternative venting system, follow the same system layout, clearance to combustibles and other guidelines as currently included in our main installation instructions for the above referenced appliances. The Selkirk Direct-Temp™ installation instructions are included with all Selkirk Direct-Temp™ terminations and provide clarification on how certain parts / pieces are assembled, but do not give specifics on system layout options. Follow both sets of instructions.

Below is a cross-reference chart for the Selkirk Direct-Temp™ system versus the system currently referenced in our instructions.


If any questions arise with respect to correlating parts or issues associated with the Selkirk Direct-Temp™ system, contact Selkirk Technical Support at 800-848-2149, ext. 203 or our Technical Support at (509) 522-2730 in USA or 250-493-7444 in Canada.

Selkirk Direct-Temp™		Simpson Dura-Vent Direct Vent GS®	
Stock No.	Description	Stock No.	Description
4DT-6	6" Pipe Length, Galvanized	908	6" Pipe Length, Galvanized
4DT-6B	6" Pipe Length, Black	908B	6" Pipe Length, Black
4DT-9	9" Pipe Length, Galvanized	907	9" Pipe Length, Galvanized
4DT-9B	9" Pipe Length, Black	907B	9" Pipe Length, Black
4DT-12	12" Pipe Length, Galvanized	906	12" Pipe Length, Galvanized
4DT-12B	12" Pipe Length, Black	906B	12" Pipe Length, Black
4DT-18	18" Pipe Length, Galvanized	n/a	n/a
4DT-18B	18" Pipe Length, Black	n/a	n/a
4DT-24	24" Pipe Length, Galvanized	904	24" Pipe Length, Galvanized
4DT-24B	24" Pipe Length, Black	904B	24" Pipe Length, Black
4DT-36	36" Pipe Length, Galvanized	903	36" Pipe Length, Galvanized
4DT-36B	36" Pipe Length, Black	903B	36" Pipe Length, Black
4DT-48	48" Pipe Length, Galvanized	902	48" Pipe Length, Galvanized
4DT-48B	48" Pipe Length, Black	902B	48" Pipe Length, Black
4DT-AJ	Adjustable Length, 11"-14", Galv.	911	Adjustable Length, 11"-14", Galv.
4DT-AJB	Adjustable Length, 11"-14", Black	911B	Adjustable Length, 11"-14", Black
4DT-EL45	45° Elbow, Galvanized	945	45° Elbow, Galvanized
4DT-EL45B	45° Elbow, Black	945B	45° Elbow, Black
4DT-EL90	90° Elbow, Galvanized	990	90° Elbow, Galvanized
4DT-EL90B	90° Elbow, Black	990B	90° Elbow, Black
4DT-AA	Appliance Adaptor, Black	n/a	n/a
4DT-RD	Restriction Disc	929	Restrictor Disc
4DT-CS	Ceiling Support	940	Round Ceiling Support/ Wall Thimble Cover
4DT-CSS	Cathedral Support Box	941	Cathedral Ceiling Support Box
4DT-WS/B	Wall Support/Band	988	Wall Strap
4DT-OS	Offset Support	989	Elbow Strap
4DT-WT	Round Wall Thimble, Black	942	Wall Thimble
4DT-FS	Firestop Spacer	963	Ceiling Firestop
4DT-TP	Trim Plate, Black	n/a	n/a
4DT-HKB	Horizontal Term. Kit B	971	Horizontal Termination Kit A
4DT-VKC	Vertical Termination Kit	978	Vertical Termination Kit
4DT-HVC	High Wind Vertical Cap	991	High Wind Termination Cap
4DT-HHC	High Wind Horizontal Cap	985	Horiz. Square High Wind Termination
4DT-SC	Storm Collar	953	Storm Collar
4DT-AF6	Adjustable Flashing, 0/12-6/12	943	Adj. Roof Flashing 0/12-6/12
4DT-AF12	Adjustable Flashing, 6/12-12/12	943S	Steep Roof Flash. 7/12-12/12
4DT-VS	Vinyl Siding Standoff	950	Vinyl Siding Standoff
4DT-VSP	Vinyl Siding Shield Plate	n/a	n/a

MAXIMUM VERTICAL RISE	30 ft Using (measured from the top of the stove)
MAXIMUM HORIZONTAL RUN	10 ft with minimum 4 ft. vertical rise (measured from the top of the stove).

Top Vent with 1 - 90 Degree Elbow, 2 - 45 Degree Elbows or Straight Vertical Installations

Vent Chart (ft)

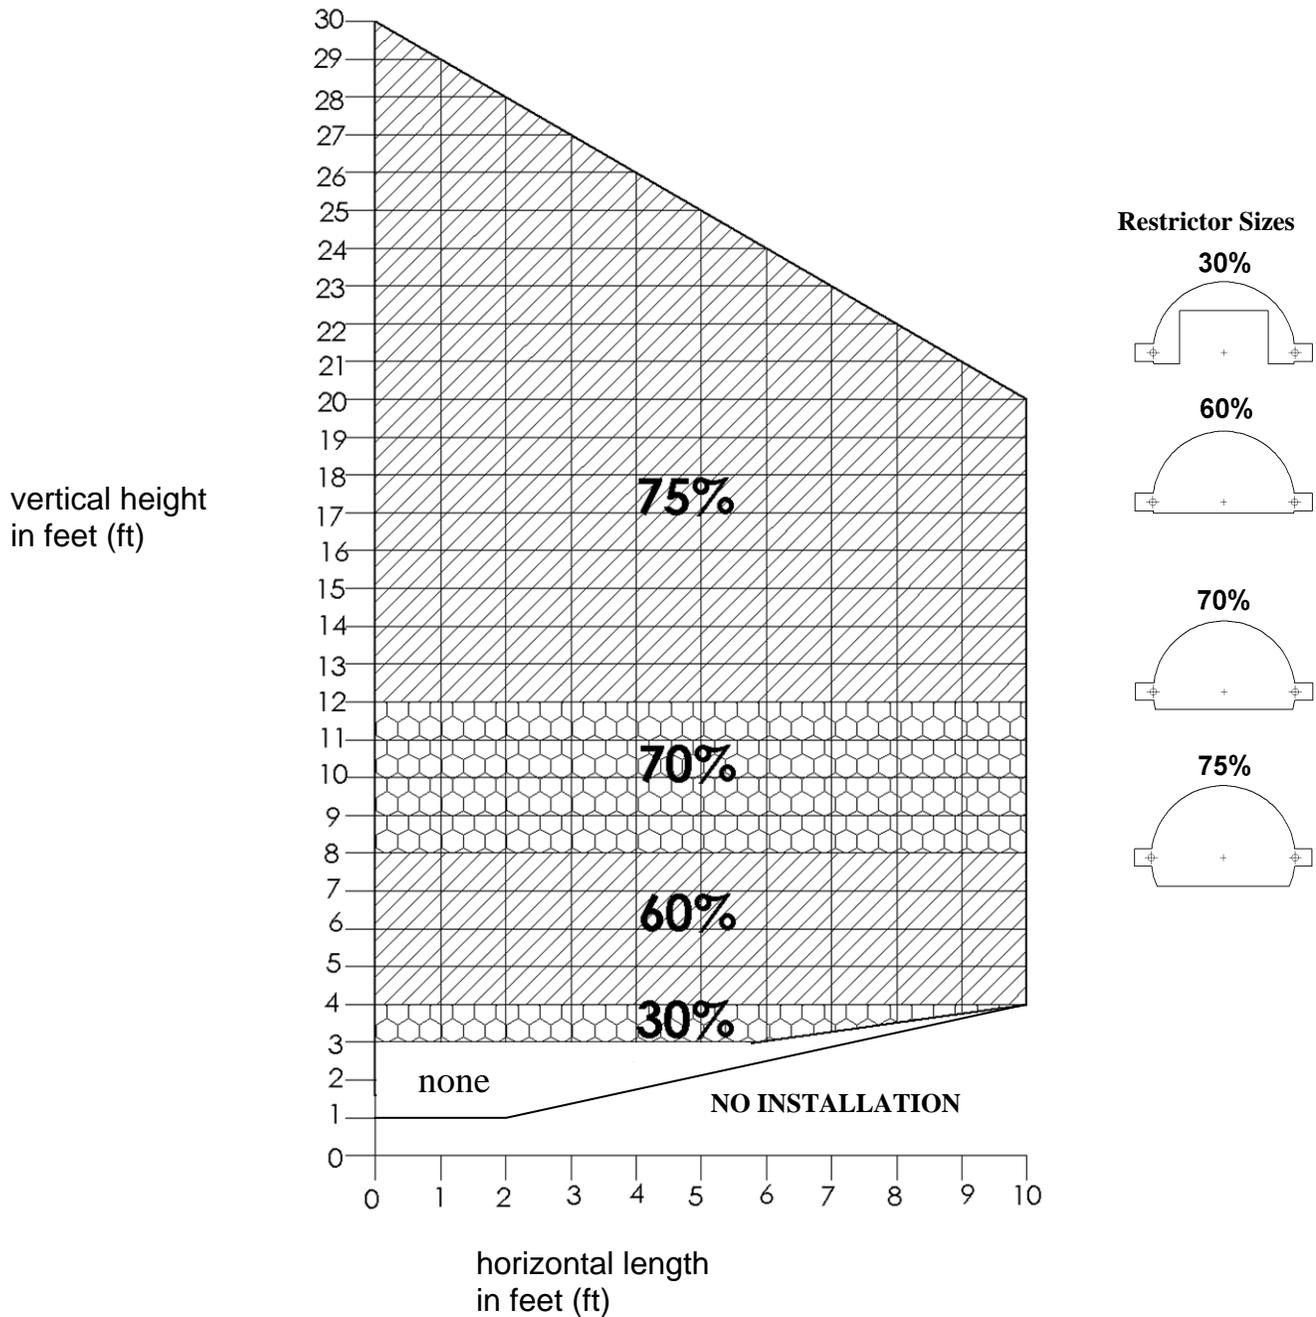

Vent Restrictors

General

When air is heated within a firebox it rises into the vent system. This rising air creates a pressure difference within the system, which is called draft. To ensure proper combustion and safety the draft within a system must be between lower and upper limits. Generally as the length of the vent system is increased the draft increases and can reach unacceptable levels. The vent kit restrictor is provided to limit the draft at the firebox when using different length vent systems on a top vent stove. It is very important that a qualified gas tradesman checks and ensures the unit is venting properly.

WARNING: IMPROPER VENTING CAN CAUSE UNSAFE OPERATION OF YOUR STOVE, ENSURE THAT A QUALIFIED LICENSED TRADESMAN INSTALLS AND CHECKS THE SYSTEM FOR PROPER VENTING AND DRAFT CONDITIONS.


The owner's manual provides charts to guide the installer in choosing the correct restrictor for each individual installation.

INSTALLATION

- 1) Install the restrictor at the top of the vent pipe just below the high wind vent cap. This is to allow you to change it if necessary without disassembly of the entire system.
- 2) Choose the vent restrictor according to the charts provided in the owners manual
- 3) Bend tabs on vent restrictor so restrictor fits snugly in vent pipe ,place the corner of the restrictor in the groove approximately 3" down from the top of the pipe, slide the restrictor down until the opposite corner "clips" into the groove in the pipe as shown in picture #1.
- 4) Place a small tack of high temperature silicon on each corner of the restrictor to ensure it will stay in place and not rattle. See picture #2
- 5) Install the high wind vent cap and check to ensure all vent connections are seating properly.
- 6) Carefully light the appliance several times and ensure there is no flame lifting or "ghosting". Carefully monitor the flame and ensure the air adjustment is correct to provide the desired flame and proper burning efficiency.



Picture #1

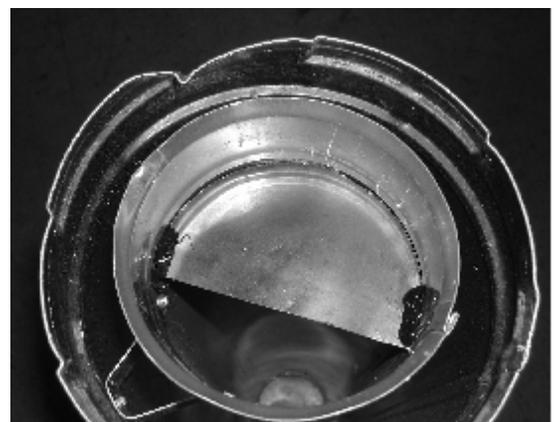

Picture #2

G:\pubdata\manual\Ventrestrictor_IN.pub

Installation Instructions

WARNING: A minimum clearance of 2" to combustibles must be maintained around the vent pipe on horizontal pipe runs and 1" on vertical runs.

TOP VENTED APPLIANCES ONLY

You must install the top venting adapter on this Tuscany 6003T-NT gas appliance before you can connect the vent system. Parts included with the appliance are:

- | | | |
|---|------------------------------------|-----------------------|
| 1 Outer intake air vent adapter connector | 1 Inner gas vent adapter connector | 1 Small gasket |
| | 1 Large gasket | 12 Sheet metal screws |


Install the inner adapter c/w gasket and then the outer adapter c/w gasket provided, then proceed with vent pipe installation.

The vent systems use twist lock connections. The adaptor attached to the unit connects to the approved venting system. Assemble the vent system using the desired combination of sections and fittings required for your particular installation. While you are assembling the pipe bear in mind the best visual appearance. Seams should be aligned and hidden as much as possible. Make sure you twist the mating section all the way to make a solid connection.

Note: As this system is a sealed system, a high temperature sealing compound must be used to seal the metal to metal joint.

Vent Pipe Assembly Procedure

Apply a bead of high temperature sealant (non-silicone) to both the 4" exhaust and 6-5/8" intake section of the male pipe. The female section of the pipe/fitting has four indentations evenly spaced around the pipe. These indentations are designed to slide over the male section of the pipe and locate into the four entry slots of the male section of pipe. Twist the female section clockwise a quarter turn to fully lock the sections together.

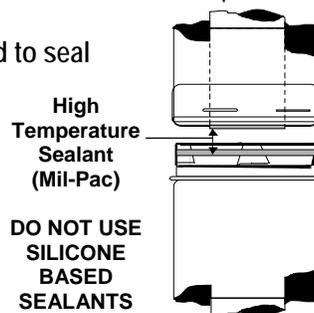

Horizontal Wall Vent Terminations

The position of the horizontal vent termination must be positioned to meet all local building codes (see termination chart on page 16).


Attach the correct length of vertical section pipe and an elbow fitting to the stove. Mark the center line of the pipe facing the wall (allowing for a 1/4" rise per foot of horizontal run). Example 10 ft of horizontal would require a rise of 2.5".

NOTE: ALLOWING THE VENT PIPE TO SLOPE DOWN TOWARDS THE VENT TERMINATION COULD CAUSE POOR COMBUSTION AND/OR HIGH TEMPERATURES THAT MAY PRESENT A FIRE HAZARD. Mark a 10" x 10" square around the center mark (inside dimensions).

Cut and frame the exterior wall to accept the wall penetration heat shield. Install the penetration shield using wood screws. If the wall being penetrated is constructed of non-combustible material a 7" hole sufficient for the vent pipe, is acceptable.

Caution: When installing the termination on to vinyl siding, a vinyl siding kit or furring strips must be used. This prevents the termination from being recessed into the siding.


When the termination is to be attached to vinyl siding apply a bead of non-hardening mastic around the outside edge to form a seal between the standoff and the termination cap. Attach the termination cap to the exterior wall inserting four wood screws through the holes in the corner of the vent termination. Complete the installation by applying a bead of mastic around the outer edge of the vinyl standoff. With the termination cap installed you can now connect the completed vent assembly by sliding the unit back towards the wall and carefully inserting the pipe into the terminal. Before the final connection is made slide on the decorative wall thimble. Secure the termination cap by securing the termination straps to the pipe as close to the exterior wall as possible using sheet metal screws. Ensure that the straps are hidden by the wall thimble cover. Apply decorative trim if required.

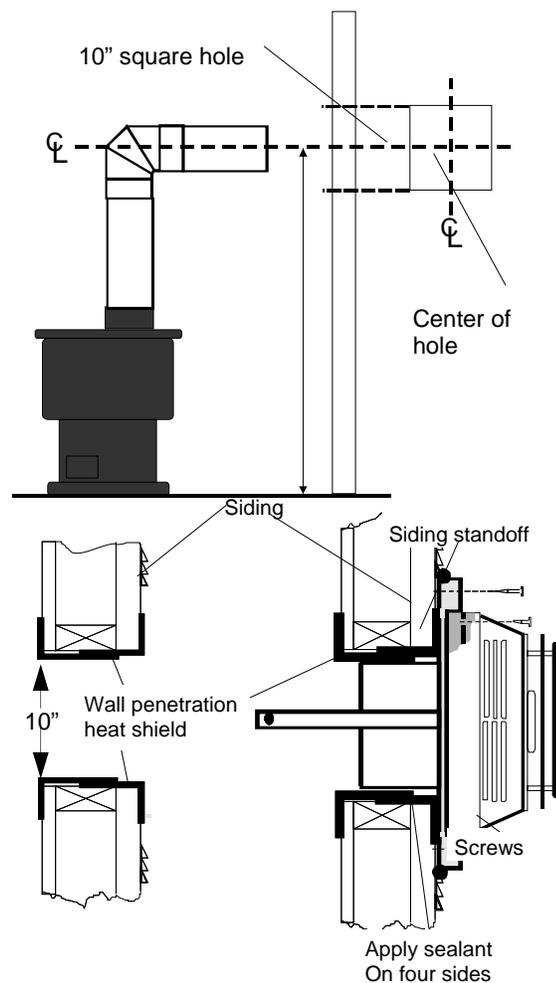

Installation Instructions



Before sliding the pipe into the termination ensure that you slide the decorative wall thimble cover and penetration heat shield over the pipe.

Slide the pipe into the vent, making sure there is at least 1" overlap between the pipe and the terminal. Attach the pipe by attaching two sheet metal screws through the termination straps and into the pipe. Bend back the straps towards the termination cap making sure they are hidden by the decorative thimble. Finally attach the wall penetration heat shield and secure with wood screws.

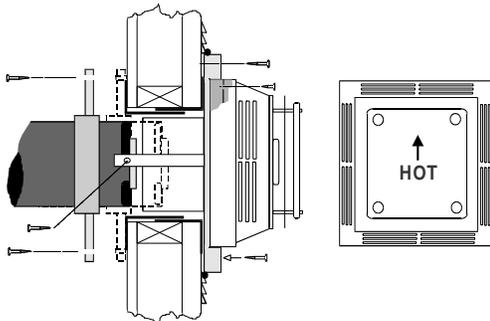

Basement Installations

To achieve the minimum vertical rise a 36" snorkel may be used. Where the bottom of the terminal may be blocked by snow etc ensure provision is made for adequate drainage.

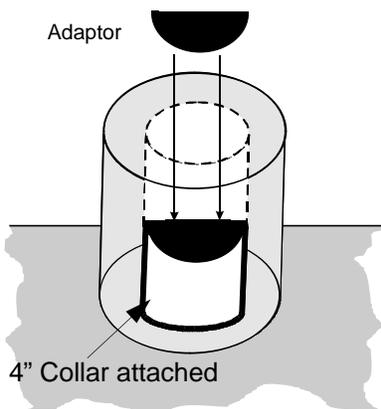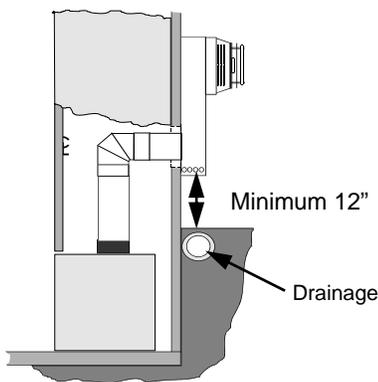

Vertical Installations


Always maintain the 1" clearance around the vent pipe (vertical), when passing through ceilings, walls, roofs, enclosures, attic rafters or any combustible surfaces.

DO NOT PACK AIR SPACES WITH INSULATION.

Refer to the vent chart for maximum allowable vertical and horizontal installations.

When planning your installation determine if ceiling joists, roof rafters or other framing will obstruct the vent system. You may have to use 45° elbows to navigate around any obstacles. When passing through a flat ceiling install a Box/Wall thimble. Cut a 10" square hole and frame as shown in the diagram opposite.

Ensure all pipe sections are fully twist locked.

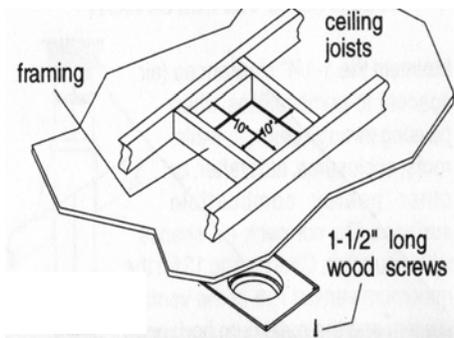


NOTE: ALWAYS CHECK YOUR LOCAL CODES BEFORE INSTALLING VENTING. NECESSARY CLEARANCES AND REQUIREMENTS MAY VARY FROM STATE TO STATE (PROVINCE TO PROVINCE).

Vent Restrictors


Due to the extra flow produced by certain venting configurations vent restrictors must be placed in the vent to maintain performance. The vent restrictors come in four sizes. When your installation requires a vent restrictor the correct restrictor is placed inside the vent adaptor collar on the unit. Proper instructions for installing a vent restrictor are included in the vent restrictor kit.

Restrictor Sizes


30%

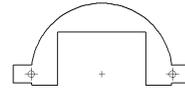


60%

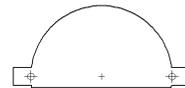

70%

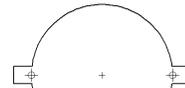


75%

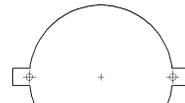

Installation Instructions

Through Roof Framing

Maintain 10" opening relative to the pitch of the roof.

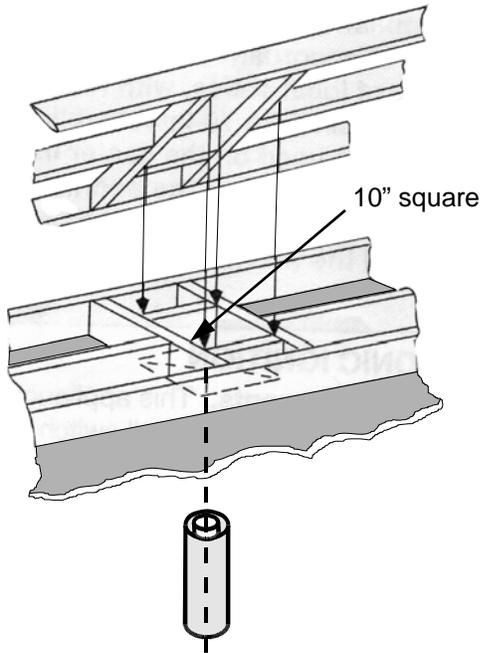


Use a suitable round or square support through the roof. Ensure adequate heat shield protection is provide. See diagram and chart for minimum protection.

Termination Above Roof

Consult local codes for minimum vent cap height above the roof (X).

Pitch (Ratio)	'X'
0/12 - 2/12	4"
2/12 - 7/12	5 1/2"
7/12 - 12/12	6 3/4"
12/12 - 24/12	7 1/2"
24/12+	12 1/2"

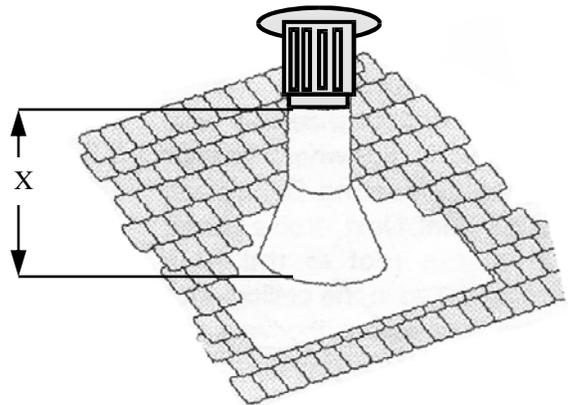


To prevent water seepage install the flashing with upper portion slid under the roofing material and the lower portion over the roofing material.

Note: Do not fasten down until the final adjustments to the vent have been made.


Installation Instructions

Offset Chart

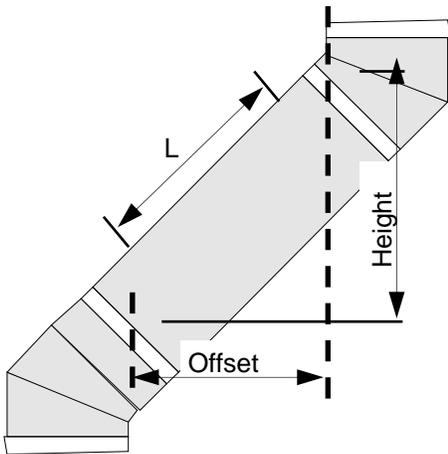


Offset chart for 45° Elbows					
Offset		Pipe Length (L)		Height	
inches	mm	inches	mm	inches	mm
4 3/4	121	0	0	13 1/4	337
9	229	6	152	17 1/2	445
11 1/4	286	9	229	19 1/2	495
13 1/4	337	12	305	21 3/4	552
21 3/4	552	24	610	30 1/4	768
30 1/4	768	36	914	39	991
38	965	48	1219	47	1194

Typical vent Installation

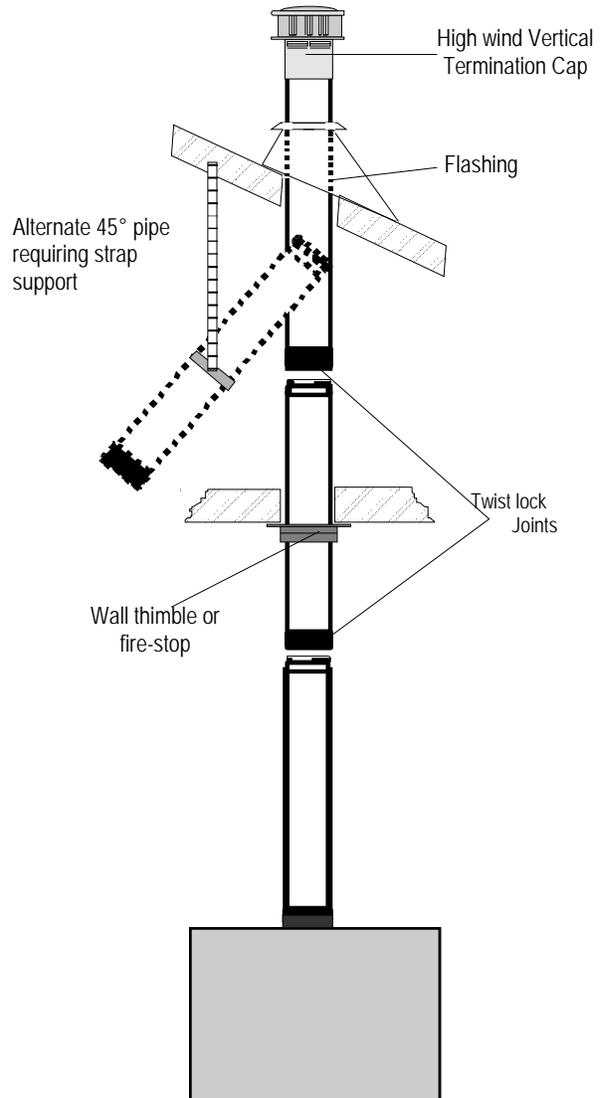

Installation Instructions

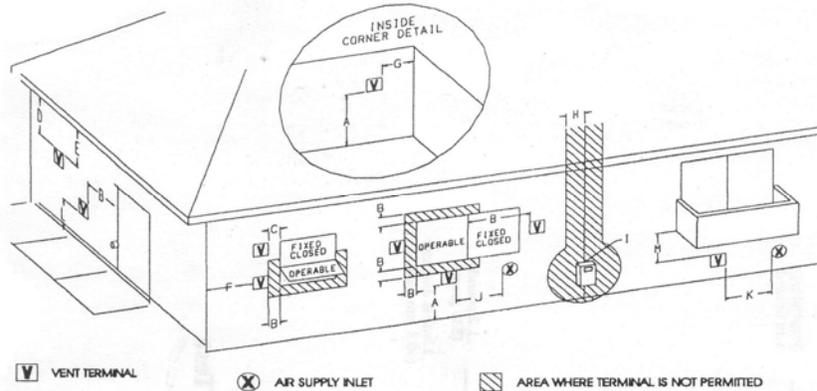

	Canadian Installations	US Installations
A= Clearance above grade, veranda porch, deck or balcony	*(min. 12"/30 cm)	*(min. 12"/30 cm)
B= Clearance to window or door that may be opened	*(min. 12"/30 cm)	*(min. 12"/30 cm)
C= Clearance to permanently closed window	*(min. 12"/30 cm)	*(min. 12"/30 cm)
D= Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2' (61 cm) from the centerline of the terminal	*min. 18" (46 cm) check with local code	*min. 18" (46 cm) check with local code
E= Clearance to unventilated soffit	*min. 15" (38 cm)	*min. 15" (38 cm)
F= Clearance to outside corner	*with DuraVent Cap min. 13"/33cm	*with DuraVent Cap min. 13"/33cm
G= Clearance to inside corner	*with DuraVent Cap min. 12"/30cm	*with DuraVent Cap min. 12"/30cm
H= Clearance to each side of centerline extended above meter/regulator assembly	3' (91cm) within a height 15' (4.5m) above the meter/regulator assembly	*
I= Clearance to service regulator vent outlet	3' (91cm)	*
J= Clearance to no mechanical air supply inlet to building or the combustion air inlet to any other appliance	12" (30cm)	9" (23cm)
K= Clearance to a mechanical air supply inlet	6' (1.83 m)	3' (91 cm) above if within 10' (3 m) horizontally
L= Clearance above paved sidewalk or paved driveway located on public property	7' (2.13 m)†	*
M = Clearance under veranda, porch, deck or balcony	12" (30 cm)‡	*

¹ In accordance with the current CSA B149.1, *Natural Gas and Propane Installation Code*

² In accordance with the current ANSI Z223.1/NFPA 54, *National Fuel Gas Code*

† A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

‡ Permitted only if veranda, porch, deck or balcony is fully open on a minimum of two sides beneath the floor.

* For clearances not specified in *ANSI Z223.1/NFPA 54* or *CSA B149.1*, one of the following shall be indicated:

a) A minimum clearance value determined by testing in accordance with section 2.23.7, or ;

b) A reference to the following footnote: "Clearance in accordance with local installation codes and the requirements of the gas supplier"

Installation Instructions (Gas Supply)

ONLY PERSONS LICENSED TO WORK WITH GAS PIPING MAY MAKE THE NECESSARY GAS CONNECTION TO THIS APPLIANCE. YOU ARE NOW READY TO HOOK UP THE GAS SUPPLY. BE SURE GAS PLUMBING INSTRUCTIONS AND ALL STATE/PROVINCIAL AND LOCAL CODES ARE CAREFULLY FOLLOWED. USE APPROVED FLEXIBLE GAS CONNECTIONS OR RIGID PIPING, DEPENDING ON PROVINCIAL AND LOCAL CODES, TO ATTACH BURNER TO GAS SUPPLY. BE SURE TO USE PROPER SIZE GAS SUPPLY LINE. CAREFULLY CHECK ALL CONNECTIONS FOR GAS LEAKS WITH SOAP AND WATER SOLUTION.

EACH INSTALLATION MUST CONFORM TO ALL LOCAL, STATE/PROVINCIAL AND NATIONAL CODES. REFER TO THE NATIONAL FUEL GAS CODE, LOCAL ZONING AND CODE AUTHORITIES FOR DETAILS ON INSTALLATION REQUIREMENTS.

EXISTING GAS SUPPLY

Before interrupting the existing gas supply it is recommended that the following be checked.

- Shut down all gas appliances and carry out a pressure test to insure there are no existing leaks in the system.
- Before connecting the appliance to the gas supply line, double check that the appliance you have purchased is designed for the gas type you are using. The gas type markings are located on the certification label and also on the appliance's gas valve.
- Check the gas pressure to insure you will be able to supply the minimum inlet pressure for the appliance.
- Check your pipe sizing to insure sufficient volume will be supplied to the appliance.

GAS SUPPLY INSTALLATION

Provide adequate clearance for proper installation and checking of the gas connections.

Have your gas supplier or a qualified gas fitter run a gas supply line into the gas appliance. The line must be properly sized and fitted according to the installation codes. The installation must provide an easily accessible manual shut-off valve, upstream of the appliance supply connection.

The appliance and its appliance main gas valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5 kPa). The appliance must be isolated from the gas supply piping system by closing its equipment shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa). Failure to follow these instructions will damage the appliance's gas valve.

Such damage is not covered by the manufacturer's warranty.

Check for proper gas supply pressure by loosening the set-screw on the inlet pressure tap (marked **IN**) on the gas valve with a small screw driver and placing a test gauge on the tap.

The minimum permissible gas supply pressure is 5.0 in. w.c. (1.24 kPa) for natural gas and 12.0 in. w.c. (3.00 kPa) for propane. Maximum gas supply pressure should never exceed 14.0 in. w.c. (3.48 kPa) or 1/2 psi. for both natural gas and propane.

BE SURE TO TIGHTEN THE PRESSURE TAP SET-SCREW AFTER CHECKING THE PRESSURE. CHECK ALL GAS CONNECTIONS FOR GAS LEAKS.

Installation Instructions

PIPING DETAIL

Gas Connection:

- *Blaze King recommends that gas connections be made by a licensed and qualified installer.*
- The gas connection supplied is 1/2". The supply pipe can be either rigid or listed flexible connection and/or copper tubing if allowed by state/provincial and local codes.
- In the USA follow local codes and/or the current National Fuel Gas Code, ANSI Z223.1.
- In Canada consult local authorities and the CSA B149.1 installation codes.
- Provide a union downstream of the appliance shut-off valve to allow disconnection of the burner assembly for servicing.

High Altitude:

- In the USA the Tuscany, is approved for altitudes up to 2000 feet (using the factory installed burner orifice). At elevations above 2000 feet, U.S. codes require a decrease in the input rating by replacing the burner orifice. The input should be reduced by 4% for each 1000 feet above sea level (see page 27). Check local gas utility for orifice size identification.
- In Canada the Tuscany is approved for altitudes up to 4,500 feet (1375 meters). For altitudes above 4,500 feet (1375 meters) consult the local codes for correct de-rating.

Note: The difference in altitude rating is a requirement of certification standards.

See page 27 for more information on orifice requirements for high altitude installations.

See Addendum on page 32 for pilot instructions

Flame Picture



AERATION ADJUSTMENT

IMPORTANT: Aeration adjustment is critical to the correct functioning of the appliance. Carbon build up, flame lift or any malfunction due to the aeration not being correctly adjusted during installation is NOT covered under the warranty

CAUTION: Parts requiring adjustment during operation may be hot.


Adjust the air shutter (lever hanging under firebox) as follows:

- Remove fan plate from the bottom of the unit.
- Loosen the Robertson (square drive) screw nearest to where the main gas line attaches to the burner.
- Slide the lever forward for more air and backward for less air. This lever is coupled to the air adjust plate near the main orifice.
- Tighten the Robertson screw when the setting is correct.
- Replace the fan plate.

Note: Aeration is factory set but may need adjustment for altitude or movement during shipping.

FACTORY SETTING

Natural Gas	1/8" (3.2mm) Open
LP GAS	1/8" (3.2mm) Open

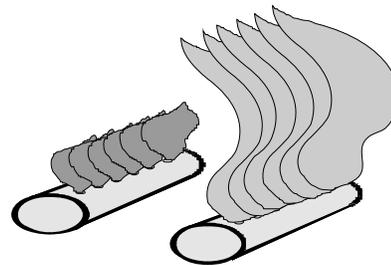

Open -Soft blue flame Closed - tall yellow flame

GAS SUPPLY PRESSURE

Natural Gas	Minimum 5.0"w.c	Maximum 10.5"w.c	Recommended 7"w.c
LP GAS	Minimum 12.0"w.c	Maximum 13.0"w.c	Recommended 12.5"w.c

IMPORTANT: Always check for gas leaks with soap and water solution or gas leak detector. Do not use open flame for leak detection.

Installation Instructions

THERMOSTAT

WARNING: The gas valve of this appliance operates on a millivolt system and is not intended to be connected to any other power source.

If required, a wall thermostat may be installed. Blaze King provides a thermostat but any CSA, ULC or UL approved 250-750 millivolt rated, non-anticipator type, thermostat may be used.

It is important to use the correct gauge wire when installing your thermostat.

OPTIONAL REMOTE

A remote control device may be available from your local dealer. Follow the directions supplied with the remote. It is important to keep the receiver away from extreme heat. Remote devices may be used with appliance, however Blaze King does not guarantee the operation of such units or the effect they may have on the performance of this appliance.

See wiring diagrams for details on valve connections.

Note: When installing a remote control or wall switch use the correct gauge of wire. See table below.

Wire Size	Max. Length
14 GA.	50 FT.
16 GA.	32 FT.
18 GA.	20 FT.
20 GA.	12 FT.
22 GA.	9 FT.

WARNING
Electrical Grounding Instructions


This appliance is equipped with a three prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three prong receptacle. Do not cut or remove the grounding prong from this plug.

LOGSET INSTALLATION

CAUTION: Only the log set supplied by the manufacturer may be used with this appliance. The log set **MUST** be installed as described in this manual.

WARNING: Dangerous operating conditions may occur if these logs are not positioned in their approved locations. If logs are broken, do not operate the unit until they are replaced.

The Blaze King Tuscany comes complete with the following Logs.

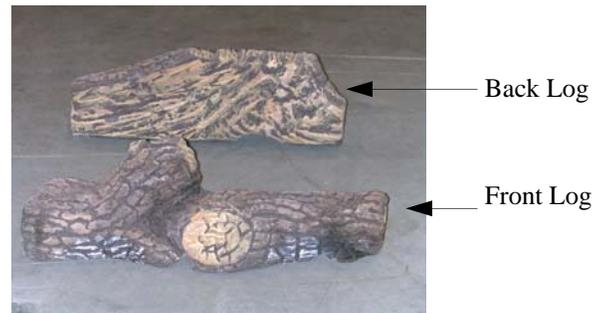

Install the logs in the following order:

1. Place the rear log on the back support shelf. Ensure it is pushed back against the rear brick panel



2. Locate the front log onto the pins provided on the front log support.




EMBER PLACEMENT: Place embers directly in front of the burner ports, leave at least a 1/4" gap between the front log and the embers.

Wiring Diagrams


THIS MOBILE/MANUFACTURED HOME APPROVED APPLIANCE MUST BE GROUNDED TO THE STEEL CHASSIS OF THE HOME. USE AN 8 GAUGE COPPER WIRE AND A SERRATED OR STAR WASHER TO PENETRATE PAINT OR PROTECTIVE COATING TO ENSURE GROUNDING.

Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

120 VOLT CIRCUIT

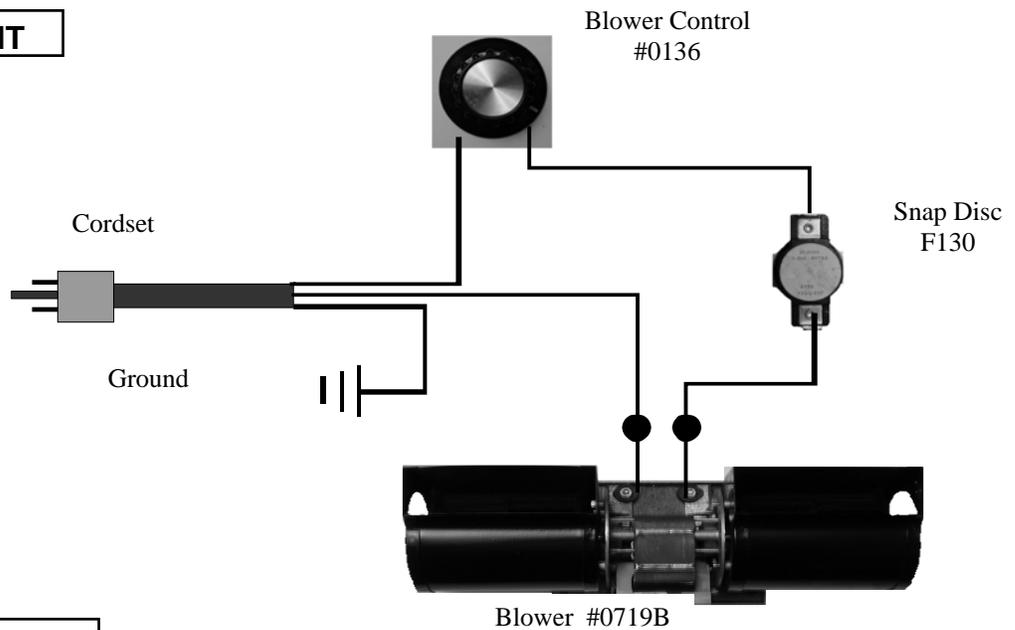

MILLIVOLT CIRCUIT

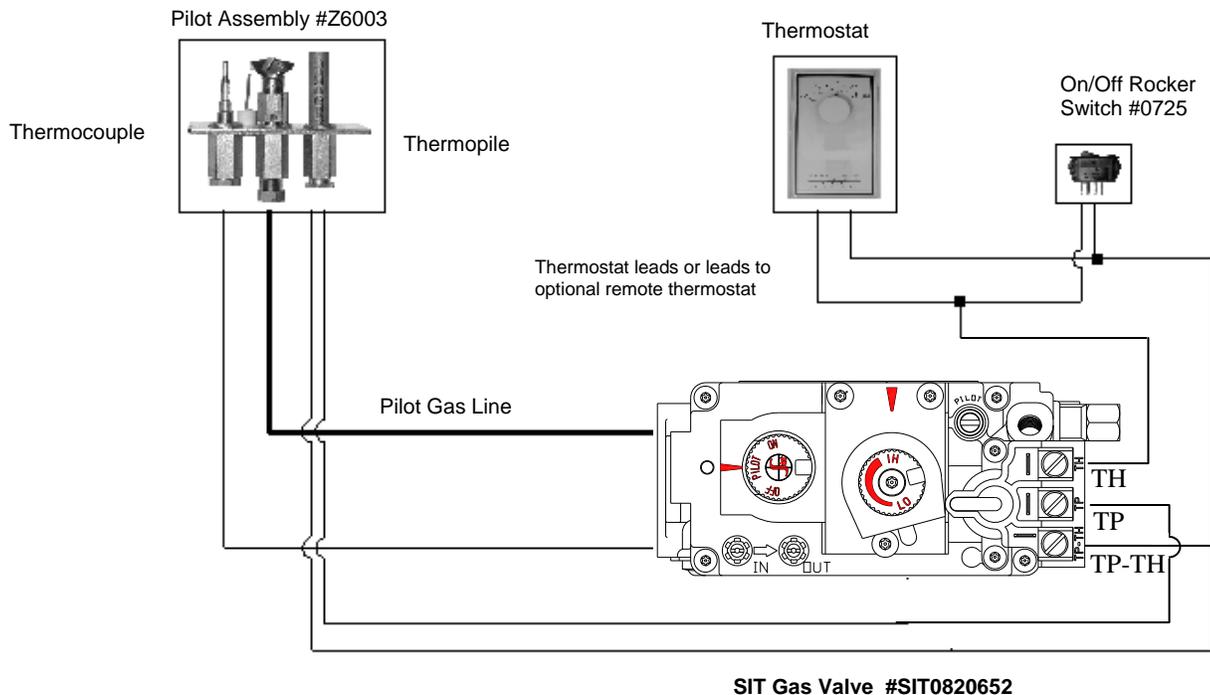

Operating Instructions

Pre- Start Up Checks

FOR YOUR SAFETY READ - BEFORE LIGHTING

WARNING
IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY AND/OR PERSONAL INJURY

DO NOT: Use tools to operate controls, only use your hand to push in and turn the controls.

DO NOT: Try to repair the appliance. Call a qualified service technician.

DO NOT: Use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and replace any part of the gas control system which has been under water.

DO NOT: Use this appliance if you smell gas.

WHAT TO DO IF YOU SMELL GAS:

- ◆ OPEN WINDOWS.
- ◆ DO NOT TOUCH ANY ELECTRICAL SWITCH; DO NOT USE THE PHONE IN YOUR BUILDING.
- ◆ EXTINGUISH ANY OPEN FLAME.
- ◆ IMMEDIATELY CALL YOUR GAS SUPPLIER FROM A NEIGHBOR'S PHONE AND FOLLOW THE GAS SUPPLIER'S INSTRUCTIONS.
- ◆ IF YOU CANNOT REACH YOUR GAS SUPPLIER, CALL THE FIRE DEPARTMENT.

WARNING - Do not operate appliance with the viewing glass removed, cracked or broken. Viewing glass must be replaced / repaired by BLAZE KING. For replacement please contact your local dealer or Blaze King to make arrangements to have your viewing glass replaced / repaired. Do not use substitute materials. Glass breakage due to slamming the viewing door or abusing your unit, is not covered under warranty.

Operating Instructions

FINAL CHECK

INSTALLER: Before leaving the appliance with the customer, you must check the operation of the appliance:

- ♦ Check correct BTU rating by clocking the appliance at 15 minutes (see certification label).
- ♦ Check flame picture. Adjust primary air if required (see page 19).
- ♦ Take time to go through the operation of this unit with the customer.
- ♦ Check pilot operation, with pilot on set main burner on lowest setting, turn on main burner complete. Complete burner should light smoothly.

- ♦ NOTE: When first fired, the unit will produce an odor. This is normal and is part of the paint curing process, it may be noticeable for at least 4 hours. It is recommended that you open a few windows to ventilate the room. During the first hour smoke detectors in the house may be set off.
- ♦ Following the initial burn-in period, the glass panel may require cleaning.
- ♦ **CAUTION: Do not clean the glass when the appliance is hot!**
- ♦ When the appliance is cold, firing may cause the glass to fog up. This is due to condensation and is normal.
- ♦ Make yourself familiar with these instruction before operating the appliance.
- ♦ Check any loose electrical wires that may cause a shock.
- ♦ Check around the appliance for gas leaks. IF YOU SMELL GAS, follow the instructions on the front cover of this manual.
- ♦ Check to see that logs are correctly positioned. The pilot light should be visible.
- ♦ Check to make sure that venting is secure.
- ♦ Check all external parts, such as grills, doors and control cover are properly attached and fastened.
- ♦ **CAUTION: Do not turn the unit off and on again without a minimum of a 60 second wait between firing.**

Make sure you read this entire manual, especially the lighting instructions on page 5, before you begin stove operation.

Keep in mind that your thermostat will only work to control your stove if the ON/OFF rocker switch is set to the "OFF" position. The "ON" position will prevent the thermostat from controlling the stove. When you are lighting your pilot your thermostat should be set to the lowest level and the ON/OFF rocker switch should be set to "OFF".




TEMPORARY SHUT-DOWN

To turn off the main burner only, set the thermostat to the lowest setting or turn remote switch to **OFF**. Press and turn the knob clockwise ↻ to **PILOT** position.

COMPLETE SHUT-DOWN Press and turn the knob clockwise ↻ to the **OFF** position.

CONTROL KNOB POSITIONS

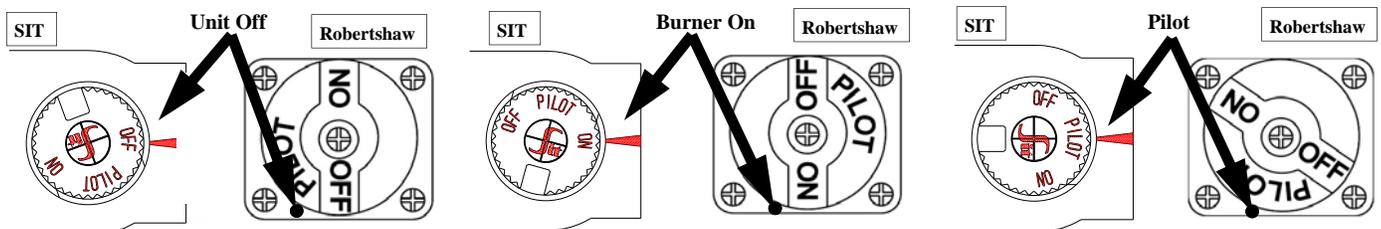

Operating Instructions

FAN OPERATION

- ◆ The convection fan speed control is located on the back of the unit. Turning the control knob all the way counterclockwise will turn off the convection fan. Adjust the blower to the desired speed.

NOTE: The fan will turn on once the unit has reached operating temperature. This prevents the discharge of cold air.

NORMAL OPERATING SOUNDS

- ◆ FIREBOX: You may hear some cracking or ticking sounds on start-up and shut-down. This is due to the expansion and contraction of the steel in the firebox.
- ◆ BLOWER: We use high efficiency fans in our appliances. You may hear a whirring sound when the fan turns on. This will decrease or increase depending on the speed setting of the fan.
- ◆ PILOT FLAME: You may detect a very slight whisper sound from the pilot when it is turned on.
- ◆ **These are all normal sounds associated with this type of appliance and should not be considered as defects.**

IMPORTANT - GLASS CLEANING - WHITE MINERAL DEPOSITS

One of the byproducts of the combustion process in a gas appliance, is a mineral which can show up as a white film on the ceramic glass of the viewing door. The composition of the deposit varies widely from various locations and also from time to time in the same location. You may have the problem for a time and then not see it for many months when it will reappear in your area. It seems this is associated with the varying sulfur content of the gas. We have discussed this problem with ceramic glass manufacturers and they cannot give us a definitive answer to this problem. Dealers have tried various cleaning products with varying results. The following recommendations will not guarantee results in your particular case.

1. Clean the glass regularly as soon as you notice the buildup (white film). If the film is left for a longer period of time, build up will bake on. It is then much harder, if not impossible, to remove.
2. NEVER use an abrasive cleaner on the ceramic glass. Any abrasion of the surface has the immediate effect of lessening the strength of the glass. An emulsion type cleaner is recommended.
3. Use a soft damp cloth to apply the cleaner. Dry the glass with a soft, dry, preferably cotton cloth. Most paper towels and synthetic materials are abrasive to ceramic glass and should be avoided.
4. Our dealers have had good results from the products listed below. We can not however guarantee the results of these products.
 - a) BRASSO
 - b) POLISH PLUS by KEL KEM
 - c) COOK TOP CLEAN CREME by ELCO
 - d) WHITE OFF by RUTLAND

NOTE: This is a problem beyond Blaze King's control and is not covered under warranty.

NOTICE: COLD WEATHER OPERATION

When using any gas appliance (LPG or NAT Gas) water is a byproduct of the combustion process. Under normal conditions this moisture is expelled through the vent into the atmosphere and does not cause any harm. In extreme cold weather the vapor may condense and freeze on any exposed surface it comes into contact with. This can cause a problem by restricting or blocking the vent, particularly with direct vent wall terminations as the exhaust is only a few inches away from the outside wall surface. What happens to the moisture after it leaves the vent cannot be controlled by the manufacturer. To extend the vent further out from the wall can sometimes but not always be an advantage. Extending the vent out from the wall may present other design problems such as ice falling from the eaves above. It is the homeowners responsibility to ensure that there is not an excessive build-up of ice on the termination.

CAUTION: WHEN OPERATING YOUR APPLIANCE DURING COLD WEATHER YOU MUST FREQUENTLY CHECK THE EXHAUST CAP FOR EXCESSIVE ICE BUILD UP.

If the appliance begins to operate abnormally - Poor flame pattern, shutting down, etc., this could be an indication of ice build up.

Maintenance

CAUTION: NEVER CLEAN THE APPLIANCE WHEN IT IS HOT. ANY SAFETY SCREEN OR GUARD REMOVED FOR SERVICING MUST BE REPLACED PRIOR TO OPERATING THE APPLIANCE. DO NOT USE ANY SUBSTITUTE MATERIALS.

FREQUENCY OF SERVICE

Regularly:

- ◆ Clean and remove any lint accumulations or debris from the grills and combustion or convection air passage ways.
- ◆ Keep the appliance area free from combustible materials, such as paper, wood, clothing, gasoline, flammable solids, liquids and vapors.
- ◆ Visually check the height and color of the burner and pilot flames.
- ◆ Check for unusual noises or odors during operation of the appliance.
- ◆ Check the vent terminal for any damage, or obstruction by plants or debris accumulation.

Once a Year:

- ◆ Open the door assembly and clean the inside of the glass with a soft, non-abrasive cloth and water or a suitable, mild, non-abrasive cleaner.
- ◆ Carefully remove the logs and gently brush off any loose carbon deposits. This job is best done outside the house, wearing a dust mask. **The logs are very fragile, take care not to break them.** After cleaning, the logs must be replaced as per the instructions in this manual.

Have a qualified service technician:


- ◆ Completely inspect the appliance and the venting system.
- ◆ Clean and remove any lint accumulations or debris in the firebox, on the burners, on the pilot, at the primary air opening, on the convection air blower and in any combustion and convection air passage ways.
- ◆ Check the safety system of the gas valve.

REMOVING THE BURNER ORIFICE

1. Use a 1/2" wrench to loosen and remove the burner orifice.
2. Change the orifice.

TECHNICAL INSTRUCTIONS

- ◆ **PILOT ASSEMBLY:** The correct flame pattern should have three strong blue flames. One flows around the thermopile, one around the thermocouple and one flows over the burner. See page 30 for further pilot instructions

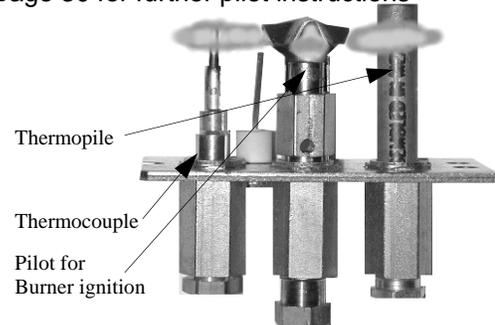

- ◆ **VENTING:**

1. Check the venting system for any signs of corrosion.
2. Remove the vent termination and check the inside of the vent by shining a light down the pipe.
3. Inspect pipe seams and joints and ensure they are still tight.
4. Check wall straps and all vent supports.

- ◆ **LOGS:**

1. Check logs are correctly positioned (see installation instructions).
2. Check there are no cracked logs.
3. Clean off any soot deposits using a soft brush.

NOTE: Incorrect log positioning may cause carbon build up and discoloration. This may void the warranty.

GAS VALVE REPLACEMENT:

1. Disconnect electricity to the appliance.
2. Shut off the gas to the appliance and disconnect the gas line to the appliance.
3. If the appliance has a remote switch or thermostat, disconnect the wires at the front of the valve.
4. Undo the four screws holding the valve plate to the pedestal assembly.
5. Gently rotate the valve to gain access to the millivolt wiring, pilot tube nut and burner supply tube nut.
6. Carefully undo the pilot and burner supply tubes and remove the valve.
7. Replacing the assembly is the reverse of the above instructions.

Maintenance

**Prior To ANY Door, Gasket, Glass or Appliance maintenance / cleaning.
BE SURE the Appliance is COLD ENOUGH TO TOUCH (room temperature).**

GOLD PLATING:

Note: Do not use any abrasive cleaning materials.

1. Gold plating requires little maintenance and needs only to be cleaned with a soft damp cloth.
2. Avoid fingerprints on gold. Wipe off fingerprints before firing.

DOOR:

1. Fully open the cast doors.
2. Locate the two handles on the sides of the door frame and steadily lift them up to loosen and remove the door assembly from the stove opening.
3. Check the gasket to be sure that it will form a good seal, replace it if there is any sign of wear.
4. Prior to re-installing the door, ensure the door handles are raised.
5. Place the bottom of the door against the stove opening, the door will rest on the track at the base of the opening, then push the door in.
6. Make sure both handles are aligned to their pins, then push both handles down and in, locking the door assembly in place. When locked the handles are just past the frame of the door assembly.
7. Visually inspect the gasket for a proper seal, remove and re-adjust the door if necessary.
8. Close the cast doors. (Note: The cast doors may be left open or closed).

VIEWING GLASS CLEANING:

Note: Non-Abrasive cleaner and Cotton cloth are the preferred materials for cleaning the viewing glass. Other cloths or paper towels are abrasive and will likely scratch the glass. **Recommended cleaner:** Stove-Brite glass cleaner.

1. Follow door removal instructions 1 and 2 (above).
2. Spray the cleaner on the glass, wipe the glass dry with a clean dry cloth.
3. Replace the door by following door removal instructions 3 to 8 (above).

VIEWING GLASS REPLACEMENT:

This appliance is supplied with 5 mm high temperature ceramic glass that will easily withstand the heat your unit was designed to produce. In the event the glass breaks, contact your dealer or BLAZE KING to arrange for your glass to be replaced. (see page 22)

REMOVING THE BLOWER:

1. Turn the gas off to the unit.
2. Turn off/unplug the electric supply.
3. On the bottom at the front, remove the 2 screws on the hinged cover and the 3 screws on the back of the cover.
4. Remove the 4 screws on the fan mount and unplug the 2 wires.
5. Replacing the assembly is the reverse of the above instructions.


DOOR SEAL GASKET

The front door of your new Blaze King direct vent is gasketed and has been adjusted for a tight seal. As with all direct vent appliances, a tight seal is necessary for maximum performance and proper venting of combustion products. With usage the door gasket material may compress. The door may require periodic adjustment to maintain a proper seal. The time to make this adjustment will vary depending upon individual hours of use, btu settings, and frequency of opening and closing the door. Check the door on your appliance periodically, especially during the first 90 days of operation, to ensure it is sealing properly. Your Blaze King dealer/installer should be contacted to properly adjust the door if required.

High Altitude Chart

Equivalent Orifice Sizes at High Altitudes per the current edition of ANSI Z223.1
(Includes 4% input reduction for each 1,000 feet).

In Canada the appliance is certified for use, up to 4500 ft, with a #37 orifice (natural gas) & #53 orifice (propane).

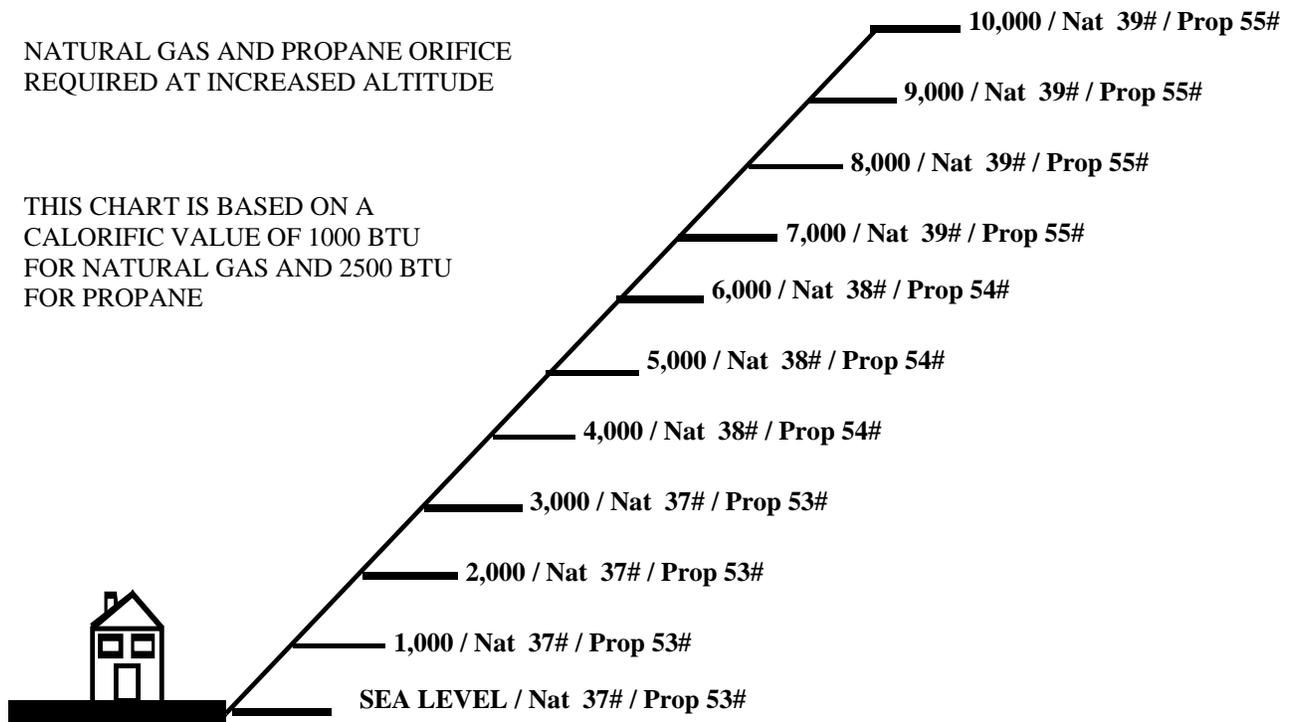

Check with your local gas supplier for correct calorific value (btu rating).

HIGH ALTITUDE INSTALLATION

When installing this appliance over 4500 ft (1372 m) above sea level in Canada, the appliance must be properly de-rated and installed according to local codes.

In the absence of local codes in accordance with CSA B149.1, in Canada. In the US for installations above 2000ft the appliance must be installed in accordance with the current National Fuel Gas Code, ANSI Z223.1/ NFPA 54.

Optional Conversion Kits

"This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authorities having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion or production of carbon monoxide may result causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper installation of the kit. The installation is not complete until the operation of the converted appliance is checked as specified in the instruction manual supplied with the kit." Before performing this or any service procedure, make sure that the gas supply to the unit and the electrical supply are shut off.

CONVERSION KIT CONTENTS

1. Main Burner orifice.
2. Valve Kit.
3. Conversion Sticker

To convert to an alternate fuel, follow these steps:


1. Open the front viewing door.
2. Remove the log set and brick panels.
3. Remove the log support plate screws.
4. Remove the burner assembly.
5. Using a 1/2" socket, unscrew the main burner orifice and replace with alternate gas orifice.
6. Convert the gas valve. See the separate gas valve manufacturers instructions supplied in the kit.
7. Fill out conversion sticker supplied in conversion kit.

To Convert the Pilot fuel, follow these steps:

1. Use a 7/16" wrench to loosen the pilot hood
2. Push the little silver tab in and the little red tab should slide out.
3. The red tab out is used for Propane
4. The silver tab out is for Natural Gas
5. Re-tighten the pilot hood.

The model Tuscany is designed to burn either Natural Gas or Propane (LP) Fuel. Each heater leaves the factory equipped for one specific fuel but it is a simple operation to convert the heater to an alternate fuel in the field. The original fuel type is marked on the rating label:

NATURAL GAS PROPANE

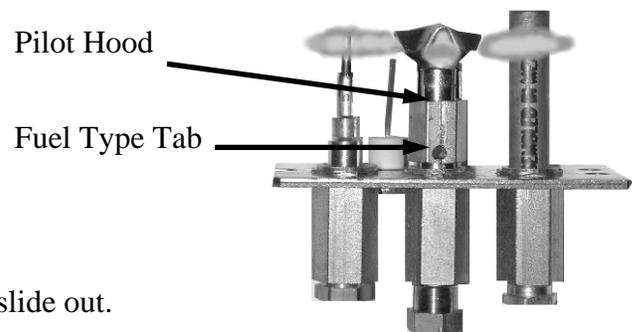

See page 30 for pilot instructions.

LEAK TESTING:

CAUTION: DO NOT TEST FOR LEAKS WITH AN OPEN FLAME.

- ◆ With the main burner "ON", test the new pressure regulator using a soap solution
- ◆ Check all fittings for leaks using the soap solution.

FUEL CONVERSION LABEL:

- ◆ Fill out and attach the fuel conversion label #0630 provided in the kit and attach it to the upper right hand corner of the approval label on the plate hanging on the back of the stove.

AERATION ADJUSTMENT

IMPORTANT: IF YOU CHANGED THE FUEL THE AERATION WILL REQUIRE ADJUSTMENT - SEE PAGE 18

ALLOW THE UNIT TO BURN FOR AT LEAST 15 MINUTES TO CHECK THE FLAME PICTURE.

- ◆ If you have converted from Natural gas to Propane you will have to INCREASE the aeration opening as propane requires more primary air to burn correctly.
- ◆ If you have changed from Propane to Natural gas you may have to REDUCE the aeration opening as Natural gas requires less primary air to burn correctly.

Warranty

BLAZE KING GAS LIMITED WARRANTY

Blaze King and its respective brands extends the following warranty for gas appliances purchased from an authorized Blaze King dealer and installed in the United States of America or Canada. Warranty starts with date of purchase by the original owner (End User) except as noted for replacement parts.

Warranty Period		Components Covered	
Parts	Labor	Gas	
1 Year		X	All parts ,materials and surface finishes (flaking and peeling) Except as covered by Conditions Exclusion, and Limitations listed
2 Years		X	Igniters, Thermocouple, Thermopile Molded Refractory Panels, Log sets Fan assembly, Ignition components, Gas valve, Burner components ,Thermostat
5 Years	2 Year	X	Firebox & Heat Exchanger
10 Years	2 Years	X	All Exterior Steel Cabinets (excluding paint finishes) Glass (thermal breakage only)
1 Year		X	Other Replacement Parts
See Conditions, Exclusions, and Limitations.			

Blaze King Gas Limited 10 Year Warranty

Blaze King is the manufacturer of the Blaze King line of heating products. At Blaze King, our commitment to the highest level of quality and customer service is the most important thing we do. Each Blaze King stove is built on a tradition of using only the finest materials and is backed by our limited lifetime warranty to the original purchaser. With Blaze King, you're not just buying a fireplace or stove, you're buying a company with years of unequalled performance and quality.

Limited 10 Year Warranty:

Under this warranty, Blaze King covers the fireplace or stove, exterior body, pedestals, legs and glass (thermal breakage only) against defects in materials and workmanship, for part repair or replacement for (10) years from original purchase date and limited labor for the first two (2) years to the original purchaser. This warranty does not cover exterior finishes. Please see the exclusions and limitation section below as certain restrictions and exclusions apply to this warranty.

Limited 5 Year Warranty:

Under this warranty, Blaze King covers the fireplace or stove firebox and heat exchanger against defects in materials and workmanship, for part repair or replacement for the first five (5) years and limited labor for the first two (2) years to the original purchaser. This Warranty covers: Heat Exchanger, Steel Firebox Panels and any steel components not covered under the ten (10) year Warranty excluding burner components and gas components. Please see the exclusions and limitation section below as certain restrictions and exclusions apply to this warranty.

Limited Two (2) Year Warranty:

Under this warranty, Blaze King covers: Gas Assembly, Burner components (ceramic and steel), Log sets, Blower and control, Temperature Sensors, thermocouple, thermopile, electronic ignition components and wire harness against defects in materials and workmanship, for part repair or replacement for the first two (2) years and limited labor for the first two (2) years to the original purchaser. Please see the exclusions and limitation section below as certain restrictions and exclusions apply to this warranty.

Limited One (1) Year Warranty:

Under this warranty, Blaze King covers all exterior surface finishes against defects in materials and workmanship, for part repair or replacement and limited labor for the first (1) year to the original purchaser. Please see the exclusions and limitations section below as certain restrictions and exclusions apply to this warranty.

How the Warranty Works (Includes Conditions, Exclusions and Limitations)

1. All warranties by the manufacturer are set herein and no claim shall be made against the manufacturer on any oral warranty or representation. All claims under this Limited Warranty must be made in writing by your dealer.
2. Any stove or part thereof that is repaired or replaced during the Limited Warranty period will be warranted under the terms of the Limited Warranty for a period not exceeding the remaining term of the original Limited Warranty or six (6) months, whichever is longer.
3. For any part or parts of this stove, which in our judgment show evidence of defects, Blaze King reserves the option to repair or to replace the defective product through an accredited distributor or agent, provided the defective part is returned to the distributor or agent, transportation prepaid, if requested.
4. If you discover a problem that you think may be covered by the Limited Warranty, you **MUST REPORT** it to your Blaze King dealer **WITHIN 30 DAYS** from the date the problem was first detected, giving them proof of purchase and the date of purchase. The dealer will investigate the problem and work with Blaze King to determine whether the problem:
 - a) Is covered by the Limited Warranty or
 - b) Can be fixed in your home or does the product need to be returned to Blaze King for repair.
5. If Blaze King determines that the stove needs to be returned to Blaze King for repair, the customer has the responsibility and the expense of removing it from their home and shipping it to Blaze King. If the problem is covered by the Warranty, Blaze King will replace the item at their discretion and the customer will be responsible for return shipping and re-installation in their home.
6. If the problem is not covered by the Limited Warranty, the customer will be responsible for all repair costs, as well as all storage, shipping and the cost of removing and re-installing the stove.

If you are not satisfied with the service provided by the Blaze King dealer, write to Blaze King at the address listed on the last page of the Owner's Manual. Include a copy of the original purchase invoice and a description of the problem.

Exclusions and Limitations:

1. This Warranty does not cover tarnish, discoloration or wear on the plated surfaces. Painted finishes will change colour after initial firing and will continue to change through the lifetime of the stove. This is normal occurrence for all high temperature coatings.
2. This Warranty excludes wear and tear or breakage caused by cleaning, moving or service on log set and panels.
3. Blaze King strongly recommends that installation be done by a certified installer. Failure to comply may adversely affect coverage under this warranty. This Limited Warranty covers defects in materials and workmanship only if the product has been installed in accordance with local building and fire codes; in their absence, refer to the owner's manual. If the product is damaged or broken as a result of any alteration, wilful abuse, mishandling, accident, neglect, or misuse of the product, the Limited Warranty does not apply.
4. The stove must be operated and maintained at all times in accordance with the instructions in the Owner's Manual. If the unit shows signs of neglect or misuse, it is not covered under the terms of this Warranty policy. Performance problems due to operator error will not be covered by the Limited Warranty policy.
5. Some minor expansion, contraction, or movement of certain parts and resulting noise, is normal and not a defect and, therefore, is not covered under this Limited Warranty.
6. Misuse includes over-firing. Over-firing this appliance can cause serious damage and will nullify the Limited Warranty.
7. The Limited Warranty will cover glass thermal breakage only and will not cover misuse of the stove glass, including but not limited to glass that is struck, has surface contaminates or has had harsh or abrasive cleaners used on it.
8. This warranty does not cover products made or provided by other manufacturers and used in conjunction with the operation of this stove without prior authorization from Blaze King. The use of such products may nullify the Limited Warranty on this stove. If unsure as to the extent of this Limited Warranty, contact your authorized Blaze King dealer before installation.
9. Blaze King will not be responsible for inadequate performance caused by environmental conditions.
10. The Limited Warranty does not cover installation and operational related problems such as use of downdrafts or spillage caused by environmental conditions. Environmental conditions include but are not limited to nearby trees, buildings, roof tops, wind, hills, mountains, inadequate venting or ventilation, excessive offsets, negative air pressures or other influences caused by mechanical systems such as furnaces, fans, clothes dryers etc.
11. The Limited Warranty is void if:
 - a) The stove has been operated in atmospheres contaminated by chlorine, fluorine or other damaging chemicals.
 - b) The stove is subject to submersion in water or prolonged periods of dampness or condensation.
 - c) Any damage to the unit, combustion chamber or other components due to water, or weather damage which is the result of, but not limited to, improper chimney/venting installation.
 - c) Salt air in coastal areas or high humidity can be corrosive to the finish; these environmental can cause rusting. Damage caused by salt air or high humidity is not covered by the Limited Warranty.
12. Exclusions to the Limited Warranty include: injury, loss of use, damage, failure to function due to accident, negligence, misuse, improper installation, alteration or adjustment of the manufacturer's settings of components, lack of proper and regular maintenance, alteration, or act of God.
13. The Limited Warranty does not cover damage caused to the fireplace or stove while in transit. If this occurs, do not operate the stove and contact your courier and/or dealer.
14. Limited Warranty does not extend to or include firebox paint, door or glass gaskets with damage caused by normal wear and tear, or exterior paint discoloration or chipping, worn gaskets, etc.
15. The Limited Warranty does not include damage to the unit caused by abuse, improper installation, or modification of the unit.
16. Damage to plated surfaces caused by fingerprints, scratches, melted items, or other external scores and residues left on the plated surfaces from the use of abrasive cleaners or polishes is not covered in this warranty.
17. The Limited Warranty does not cover tarnish, discoloration or wear on the plated surfaces.
18. The paint on the brick liner may peel. It is not a flaw and is not covered under warranty, due to extreme conditions in the firebox.
19. Blaze King is free of liability for any damages caused by the fireplace or stove, as well as inconvenience expenses

and materials. The Limited Warranty does not cover incidental or consequential damages.

20. The Limited Warranty does not cover any loss or damage incurred by the use or removal of any component or apparatus to or from the Blaze King fireplace or stove without the express written permission of Blaze King and bearing a Blaze King label of approval.

21. Any statement or representation of Blaze King Products and their performance contained in Blaze King advertising, packaging literature, or printed material is not part of the Limited Warranty.

22. The Limited Warranty is automatically voided if the fireplace or stove's serial number has been removed or altered in any way. If the stove is used for commercial purposes, it is excluded from the Limited Warranty.

23. No dealer, distributor, or similar person has the authority to represent or warrant Blaze King Products beyond the terms contained within the Limited Warranty. Blaze King assumes no liability for such warranties or representations.

24. Blaze King will not cover the cost of the removal or re-installation of the stove, hearth, facing, mantels, venting or other components.

25. Labor to replace or repair items under this Limited Warranty will be covered per our warranty service fee reimbursement schedule. Labor rates are set per component and as such total labor costs may not be covered.

26. If a defect or problem is determined by Blaze King to be non-warrantable, Blaze King will not be liable for travel costs for service work. In the event of in-home repair work, the customer will pay any in-home travel fees or service charges required by the Authorized Dealer.

27. At no time will Blaze King be liable for any consequential damages which exceed the purchase price of the unit. Blaze King has no obligation to enhance or modify any stove once manufactured (example: as a stove model evolves, field modifications or upgrades will not be performed).

28. This Limited Warranty is applicable only to the original purchaser and it is non-transferable.

29. This warranty only covers Blaze King Products that are purchased through an authorized Blaze King dealer.

30. If for any reason any section of the Limited Warranty is declared invalid, the balance of the warranty remains in effect and all other clauses shall remain in effect.

31. The Limited Warranty is the only warranty supplied by Blaze King, the manufacturer of the stove. All other warranties, whether express or implied, are hereby expressly disclaimed and purchaser's recourse is expressly limited to the Limited Warranty.

32. Blaze King and its employees or representatives will not assume any damages, either directly or indirectly, caused by improper usage, operation, installation, servicing or maintenance of this stove.

33. Blaze King reserves the right to make changes without notice. Please complete and mail the warranty registration card and have the installer fill in the installation data sheet in the back of the manual for warranty and future reference.

34. Blaze King is responsible for stocking parts for a maximum of seven (7) years after discontinuing the manufacture or incorporation of the item into its products. An exception to this would be if an OEM supplier is not able to supply a part.

Troubleshooting

Please check to make sure the instructions are followed exactly before attempting trouble shooting of the appliance.

WARNING: Trouble shooting and servicing of gas and electrical devices of the appliance should only be conducted by a qualified service technician.

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Pilot will not light after pressing the sparker many times.	<i>Air in gas line. No gas supply.</i> <i>Piezo wire loose.</i> <i>Electrode grounding. Piezo wire grounding. Defective Piezo. Electrode gap Incorrect.</i>	<ul style="list-style-type: none"> • Purge air out of gas line. • Check to make sure the gas supply to the appliance is turned on and there is adequate gas supply pressure to the appliance. • Check for sparks between the spark electrode and the pilot head when the sparker is pressed. If there are no sparks: • Check for broken or poor connection from the sparker to the electrode. • Check for the spark shorting or arcing at other locations. • Check for defective piezo. • Check for defective/cracked spark electrode. • With the viewing door open, try lighting the pilot with a match. • Note: If there is no gas or air coming out of the pilot and there is gas pressure to the appliance, the pilot orifice may be blocked or the gas valve maybe defective.
Pilot will not remain on after being lit.	<i>Poor Pilot flame. Faulty thermocouple. Thermocouple and/or Thermopile grounding.</i> <i>Loose TP-THTP on gas valve. Faulty gas valve.</i> Note: This is very rare and faults blamed on the gas valve are usually incorrect.	<ul style="list-style-type: none"> • Check to see if the pilot flame is large enough to reach and surround the thermocouple. If the flame is too small, check for correct gas supply pressure. If pressure is good, adjust the pilot flame size with the adjustment screw on the valve. If the flame cannot be adjusted, there might be some debris obstructing the pilot orifice. • Check for correct millivolts at the thermocouple. The thermocouple should generate at least 30 mv. • Check for poor connection of the thermocouple and thermopile to the valve. • If readings are correct for thermopile and thermocouple replace gas valve.
Frequent pilot outage problems.	<i>Pilot adjusted too low. Switch wires may be grounding out. Thermocouple worn. Adverse wind conditions.</i>	<ul style="list-style-type: none"> • Adjust pilot and clean if required. • Check switch wires. • Check thermocouple millivolts (see above). • Check termination location is not subject to adverse environmental conditions.
Sharp blue flames lifting off burner.	<i>Incorrect aeration adjustment.</i>	<ul style="list-style-type: none"> • Reduce primary aeration adjustment.
Convection blower does not operate.	<i>No power supply. Thermal snap switch lose or defective. Loose electrical connection.</i> <i>Defective speed controller. Defective blower.</i>	<ul style="list-style-type: none"> • Check electrical supply to unit. • Turn the fan speed control to a different setting, make sure it is not in the off position • Check for correct positioning of the snap disc. You can by-pass the snap disc to check it's operation. • Check all electrical connections are secure. • By-pass the speed controller to check for defective operation. • With the speed control by-passed check for 120 VAC to the motor. If you have 120VAC and the motor is not working, the blower motor is defective.

Troubleshooting

Please check to make sure the instructions are followed exactly before attempting trouble shooting of the appliance.

WARNING: Trouble shooting and servicing of gas and electrical devices of the appliance should only be conducted by a qualified service technician.

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The main burner does not turn on with the pilot lit.	<i>Gas valve not in on position. Faulty thermopile. Faulty unit on/off switch. Faulty thermostat. Faulty Gas Valve</i>	<ul style="list-style-type: none"> • Check to make sure the control knob is turned to the 'ON' position. • Check for correct millivolts at the thermopile, it should generate at least 250mv. • Place jumper wire across terminals TH-THTP, if burner comes on this will indicate you have a poor connection or faulty appliance on/off switch, wall switch or wall thermostat. • Check the minimum inlet gas supply pressure, if the minimum pressure is present then try changing the gas valve.
The main burner shuts off when the appliance is warm.	<i>Pilot flame lifting of thermopile.</i>	<ul style="list-style-type: none"> • Check thermopile voltage from start up. If the millivolts drop dramatically it is an indication that the pilot is lifting. Check the vent is correctly attached.
Excessive soot on burner or logs.	<i>Incorrect aeration adjustment. Incorrect venting.</i>	<ul style="list-style-type: none"> • Check aeration setting. • Check that venting is correctly attached.

Replacement Parts List


PART NAME	PART #
Gas Valve convertible—SIT	SIT0820652
Piezo igniter with nut	SIT0073952
Relief Plate gasket	6097
Burner Orifice Propane	#53
Burner Orifice Nat. Gas	#37
2 piece log set	M0814
Brick Panel Right	6062
Brick Panel Left	6063
Brick Panel Rear	6061
Brick Panel Base	6060
Brick Panel base Right	6103
Brick Panel Base Left	6104
Brick panel clip	6065
Rheostat Fan Control w/off	0136
Door Assembly—Black	Z6018P-C
Door Assembly—Gold	Z6018G-C
Main Door Rope Seal	0188
Fan Switch 130F	1144AA

PART NAME	PART #
Fan assembly	0719B
ON/OFF rocker switch	0725
Spark igniter electrode	0738B
Thermopile generator	0721A
Thermocouple	0842VC
Pilot assembly	Z6003P
Burner tray Assembly	Z9919
Orifice spring	0723
30% Restrictor	6082
60% Restrictor	6094
70% Restrictor	6095
75% Restrictor	6097
Bag of Fiber Embers	0745
LPG Conversion Kit—SIT (0-2000ft USA / 0-4500ft Canada)	Z0760P

GAS CONVERSION INSTRUCTIONS FOR CONVERTIBLE ORIFICE IN END MOUNT BRACKET PILOT ("C" SERIES)

NOTE: IT IS NOT NECESSARY TO REMOVE THE PILOT TUBE FOR GAS CONVERSION




1) LOOSEN (CCW ROTATION) THE PILOT TARGET HEX FITTING 1/4 TURN WITH A 7/16" END WRENCH AS SHOWN IN FIGURE A. USE CAUTION TO AVOID BENDING ORIFICE STRIP BY IMPROPER PLACEMENT OF END WRENCH.

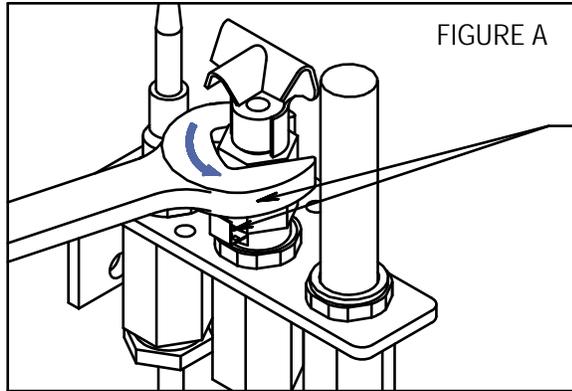


AVOID CONTACTING ORIFICE STRIP WITH END WRENCH. FAILURE TO DO THIS CAN CAUSE DISTORTION OF THE ORIFICE STRIP WHEN LOOSENING OR TIGHTENING.

2) PUSH ORIFICE STRIP TAB ALL THE WAY AGAINST THE HEX FITTING AS SHOWN IN FIGURE B1 & B2.

NOTE: ORIFICE STRIP MAY BE RANDOMLY LOCATED ON ANY SIDE OF HEX FITTING

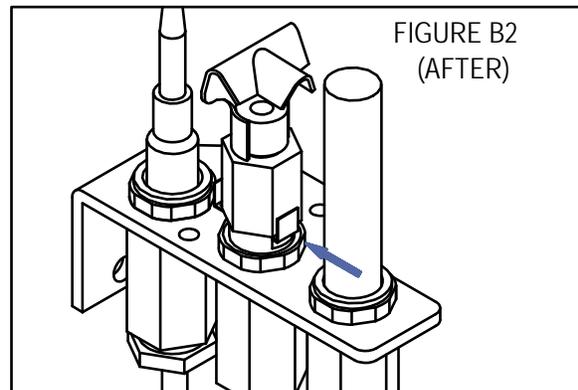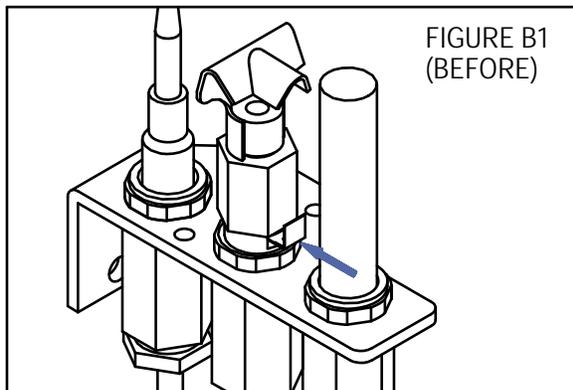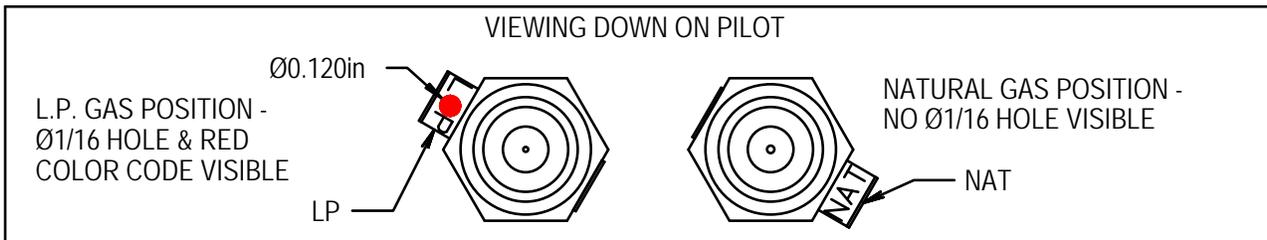

3) RE-TIGHTEN THE PILOT TARGET HEX FITTING UNTIL THE PILOT TARGET ALIGNS WITH THE THERMOCOUPLE & THERMOPILE AS SHOWN IN FIGURE C. USE CAUTION TO AVOID BENDING ORIFICE STRIP BY IMPROPER PLACEMENT OF END WRENCH.

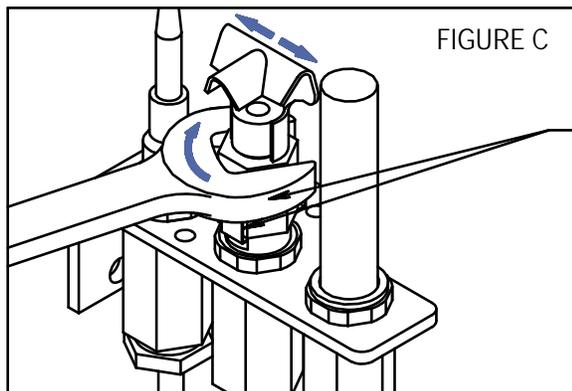

AVOID CONTACTING ORIFICE STRIP WITH END WRENCH. FAILURE TO DO THIS CAN CAUSE DISTORTION OF THE ORIFICE STRIP WHEN LOOSENING OR TIGHTENING.

4) INSTALLATION IS COMPLETE.

