

1) Inspect glass thoroughly for pits and scratches.  
Wrap glass as per fig1 , the Princess glass uses "Specialty"  
brand gasket. King uses "Mid-mountain" They do **NOT** interchange  
Start the wrap on the corner opposite the "Blaze King" logo  
Finish the wrap making sure no voids are left in the gasket



start & stop

logo



specialty




mid mountain

2) Lay out the door frame with hinges to left. Install glass with logo to the lower left corner. Install the glass retainers with the shouldered nuts. Insure the glass is parallel to the frame and tighten the nuts evenly.



note:  
logo position

3) Apply RTV 732 sealant bead ( 1/4") to retainers on all sides as per diagram

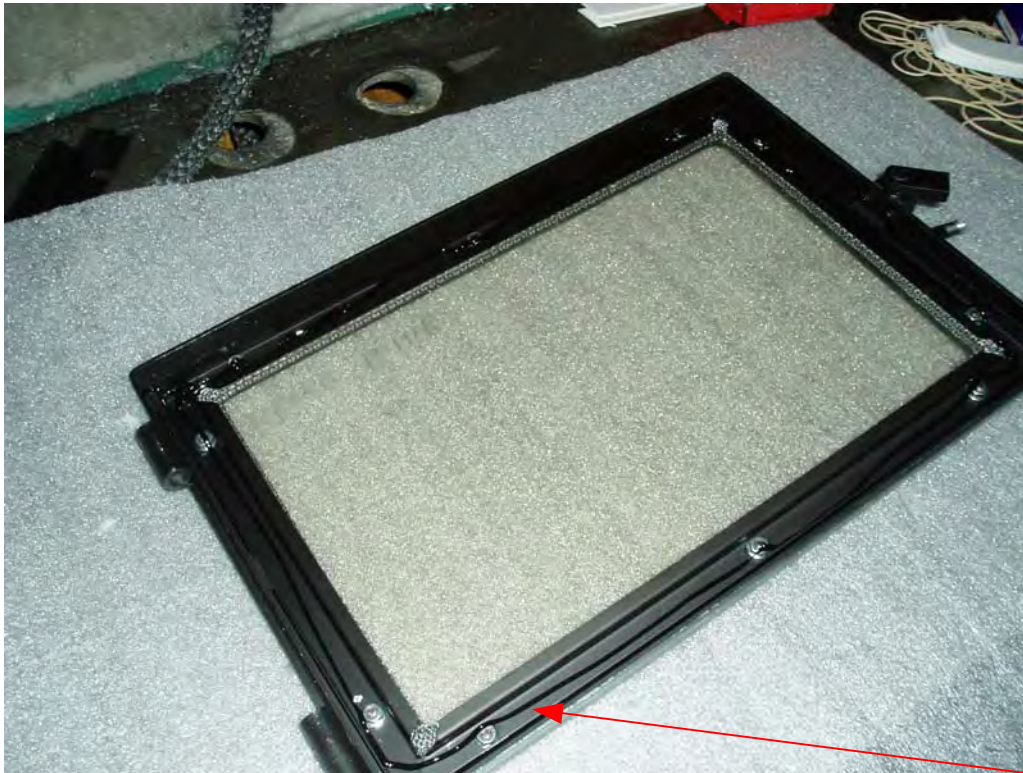

sealant


4) Lay 7/8" **HYTEK 1000** rope gasket loosely in the retainer channel starting at the logo with about 3/4" overlapping the frame.




5) Lay the remainder of the gasket in the channel slightly compressing it as you go making sure the gasket has NO twists in it. Do not stretch or pull the gasket.



6) Overlap the starting point by approx 3/4" as well

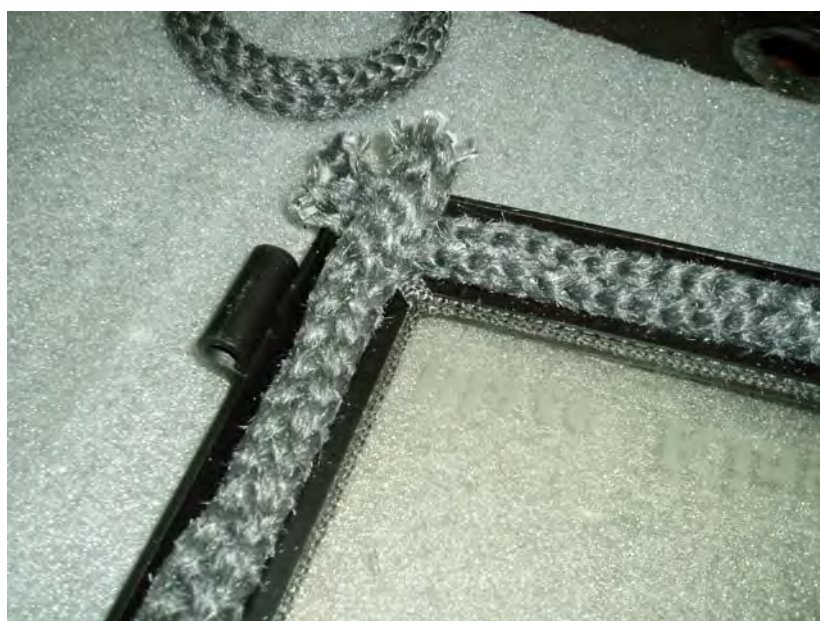

7) Using an awl or small flat screwdriver compress the overlaps to fit within the confines of the door frame. Trim away any loose ends or excessive overlap.

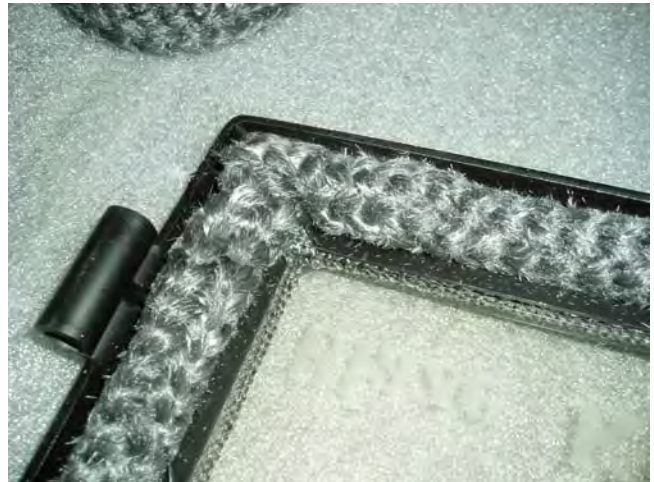

8) Test fit the door to insure door alignment as well as to facilitate in seating the gasket.