

TITLE
 Bricks size A-Z.tcw rev 08/06/2009
 SIZE
 CAGE CODE
 DWG NO
 SCALE
 SHEET
 REV

PEU 1006 (Ultra) Brick Layout

BOTTOM 2nd Layer

A	A	N	A	A
I	I	N	I	I

BACK

A	A	A	A	A
---	---	---	---	---

LEFT SIDE

A
A
A
A

RIGHT SIDE

A
A
A
A

BOTTOM


A	K	O	K	A
C	L	G	L	C

FRONT


B	B	F	B	B
---	---	---	---	---

KEU 1107 (Ultra) brick layout


BACK

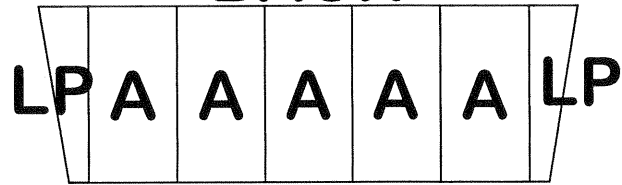


BOTTOM

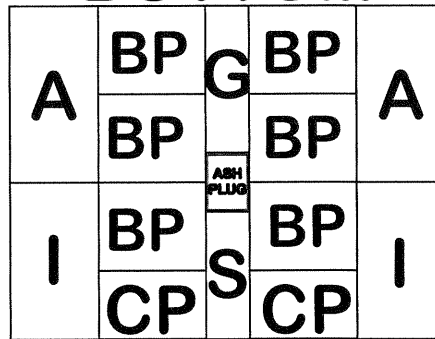


LEFT SIDE

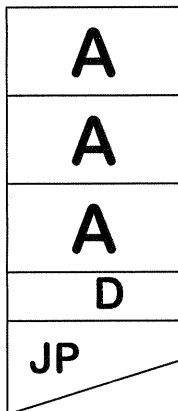


RIGHT SIDE

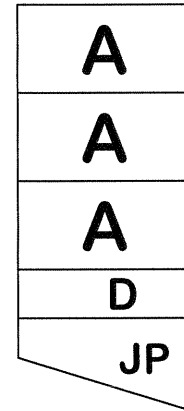

BOTTOM 2nd Layer

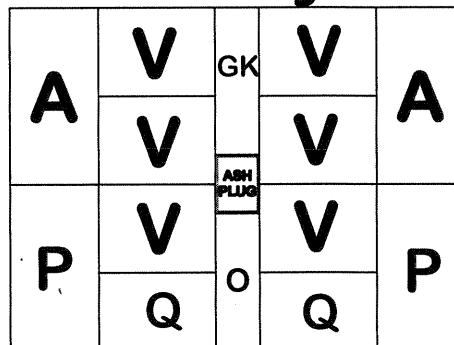


FRONT

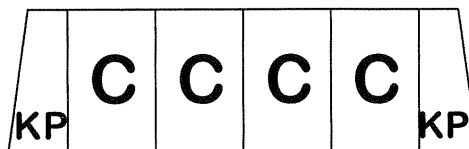


APEX Brick layout


BACK

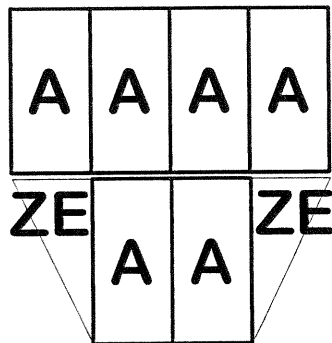


LEFT
SIDE

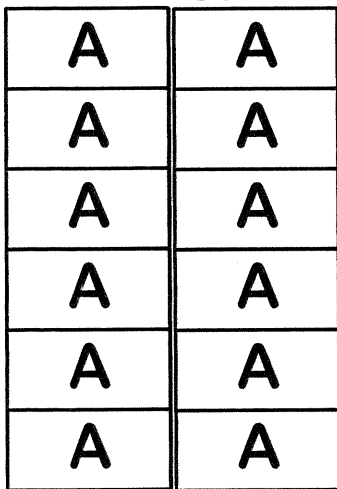

BOTTOM

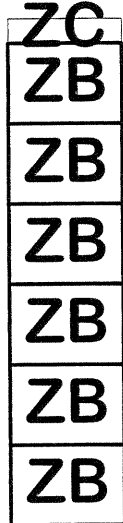


RIGHT
SIDE

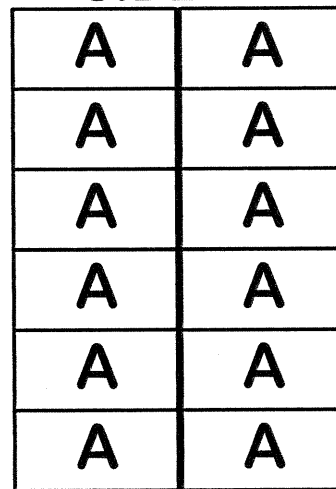


ORDER: first back bricks, then sides and bottom


VC120 Brick layout

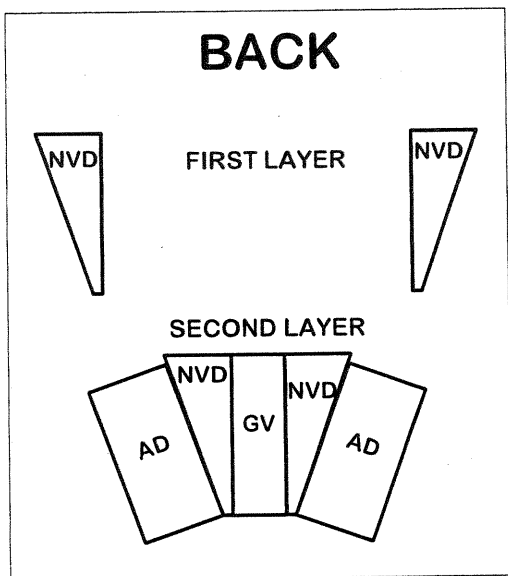



LEFT SIDE

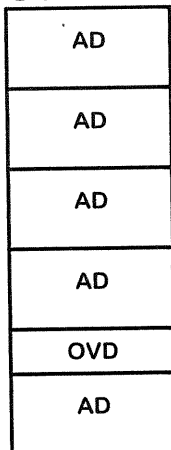

RIGHT SIDE

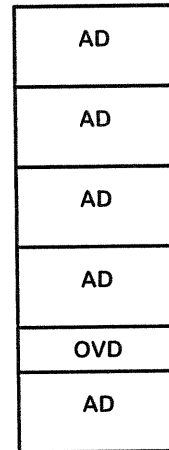


OVER DOOR

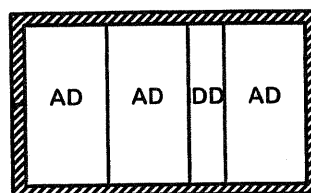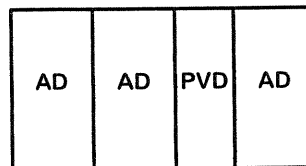

**LARGE
BRICK BAFFLE
2 PER**

Steel Frame

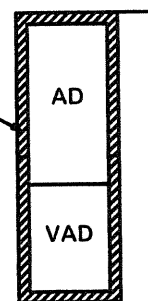


**SMALL
BRICK BAFFLE
1 PER**

RGT Brick layout

BACK




Drill holes
Dim to confirmed
Use jig

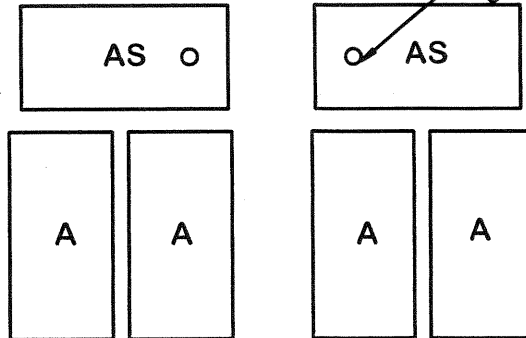

LEFT SIDE

BOTTOM


RIGHT SIDE

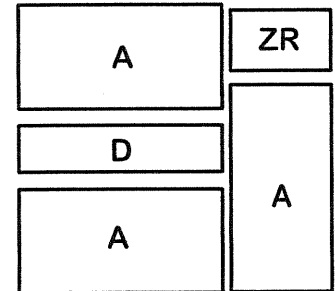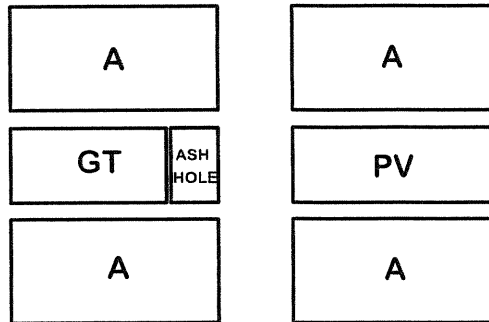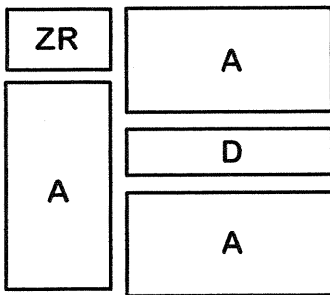

Glue side bricks

Gasket


Use stove nuts to secure

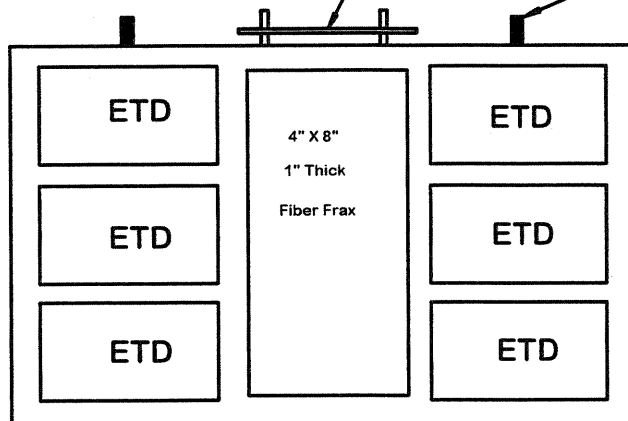


BAFFLE

KE 1107 (Classic) Brick Layout


BACK

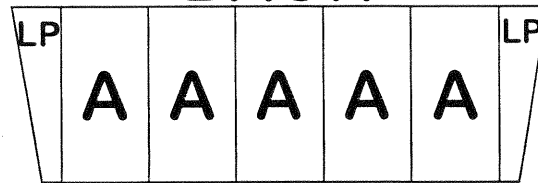


BOTTOM

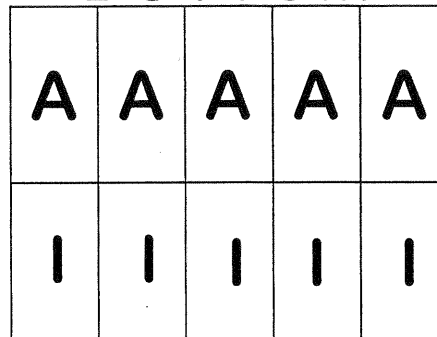


**LEFT
SIDE**

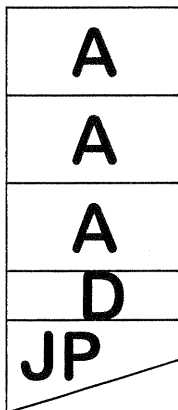


**RIGHT
SIDE**

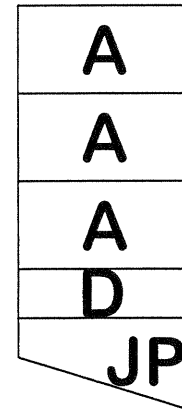

**BOTTOM
2nd Layer**

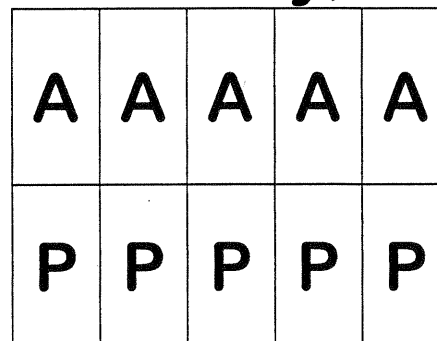


FRONT

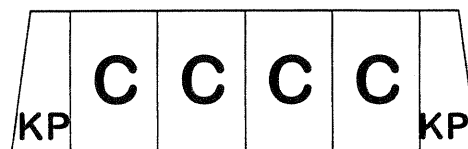


PI 1010A Brick layout

No blanket under bricks


BACK

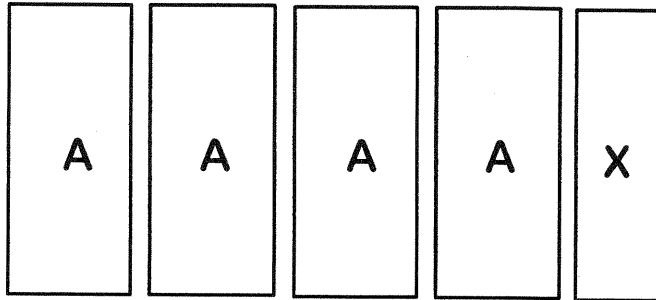



LEFT SIDE

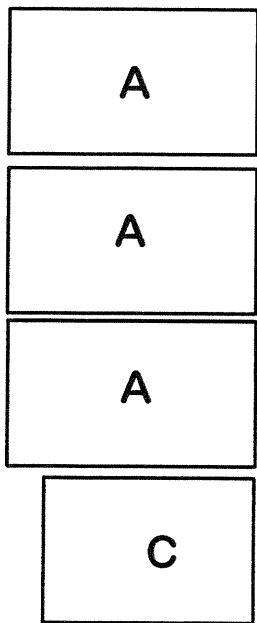

BOTTOM

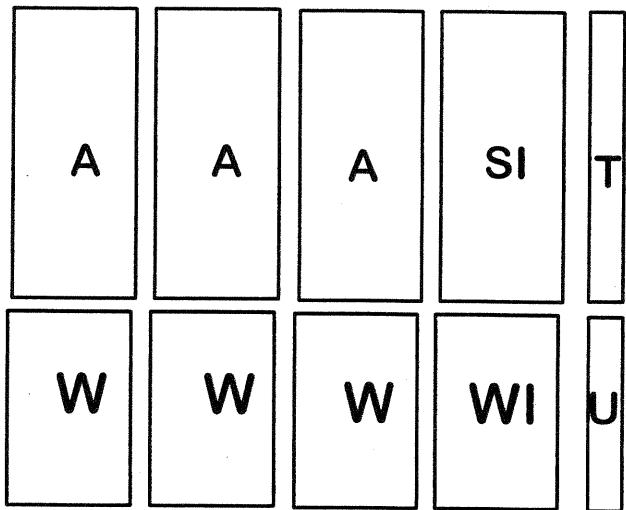


RIGHT SIDE

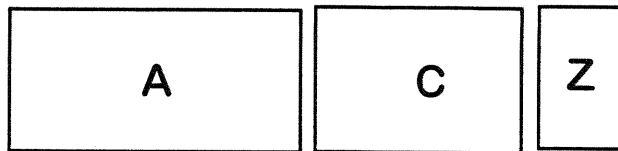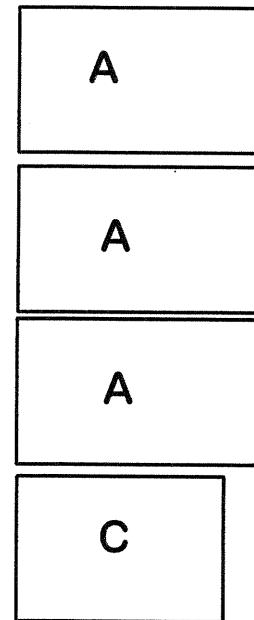


FRONT

KEL 1107 (Parlor) brick layout


BACK

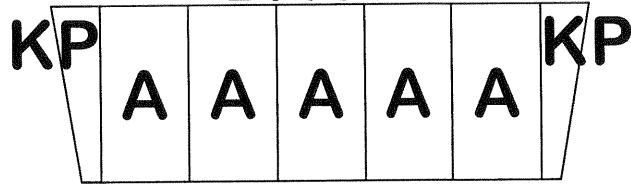


BOTTOM

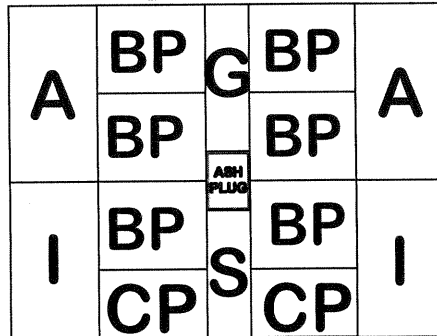


LEFT SIDE

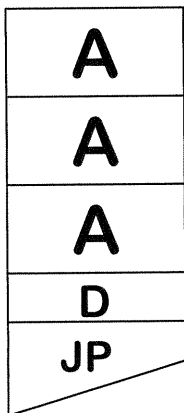


RIGHT SIDE

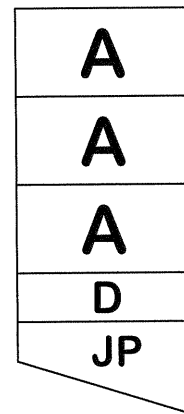

BOTTOM 2nd Layer

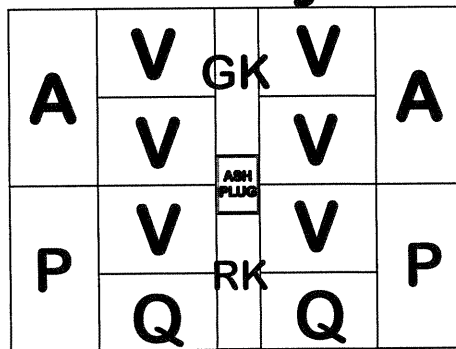


FRONT

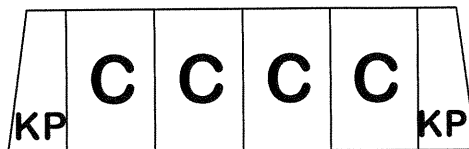


KE 1102 Brick Layout


BACK

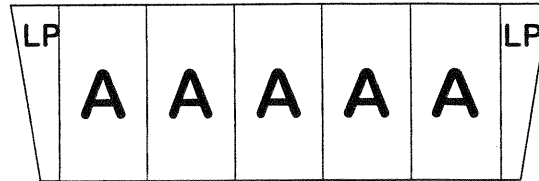



LEFT
SIDE

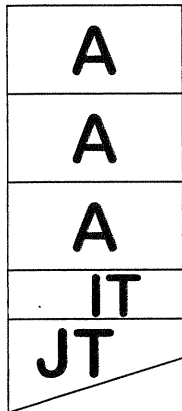

BOTTOM

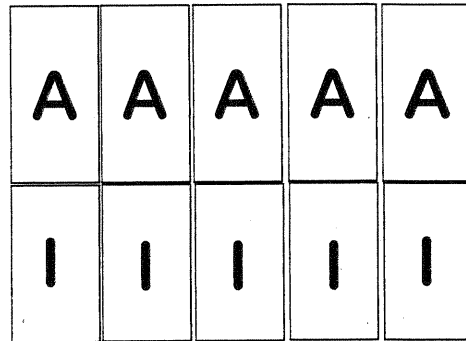


RIGHT
SIDE

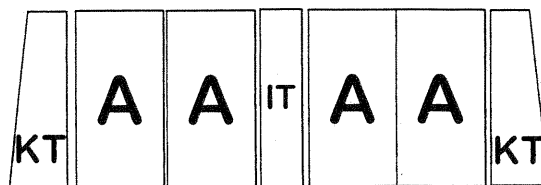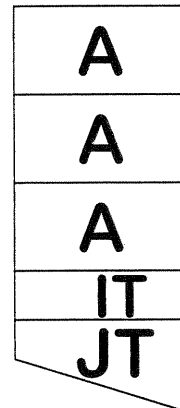


BR11 Brick layout


BACK

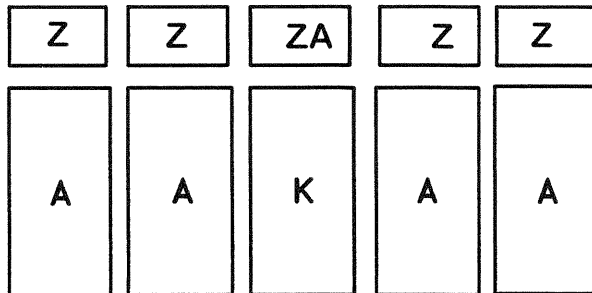


LEFT SIDE

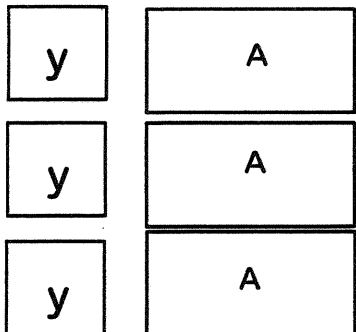

BOTTOM

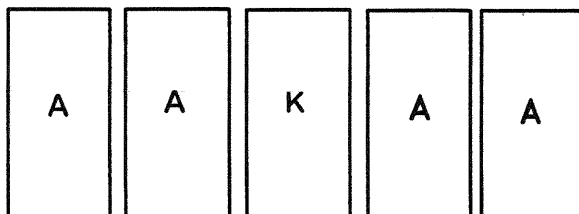


RIGHT SIDE

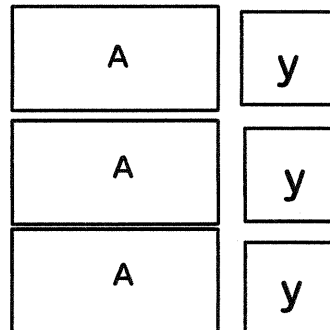


KT 1102 Brick Layout


BACK

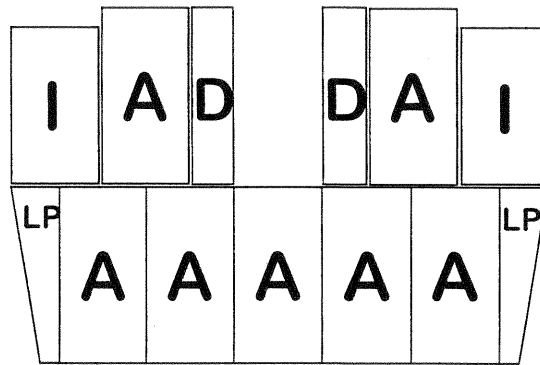




LEFT SIDE

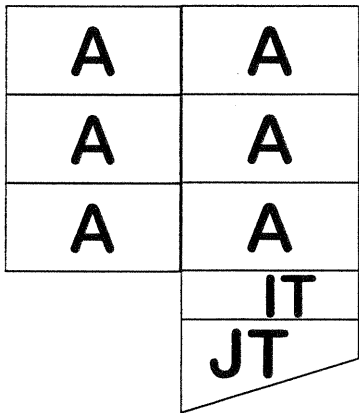

RIGHT SIDE

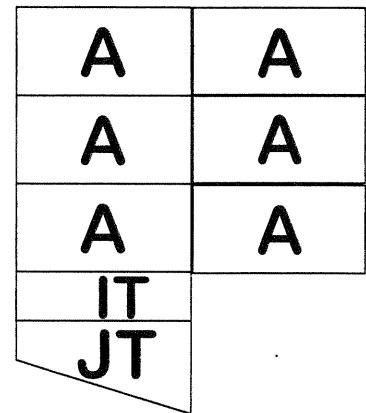


BOTTOM

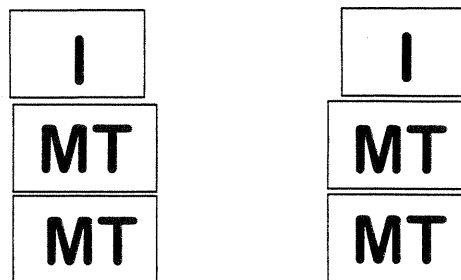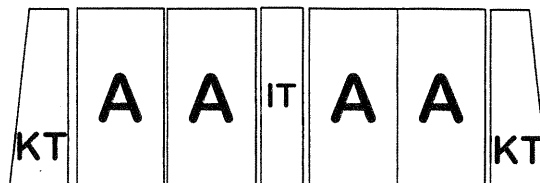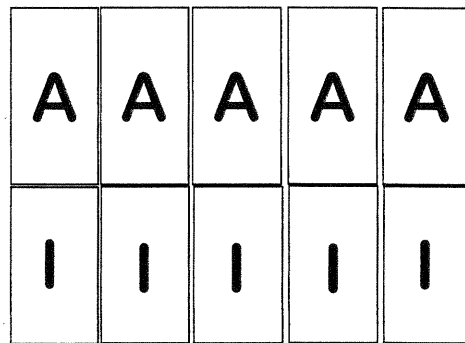


BAFFLE

PI 1010 Brick layout


BACK

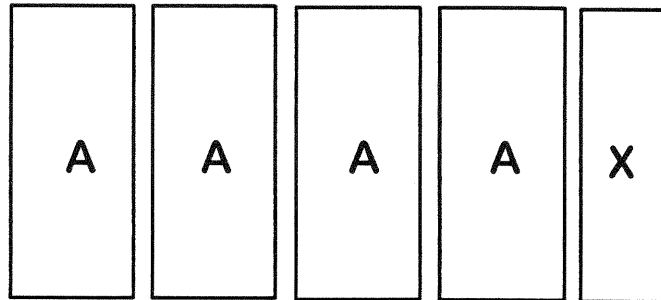



LEFT SIDE

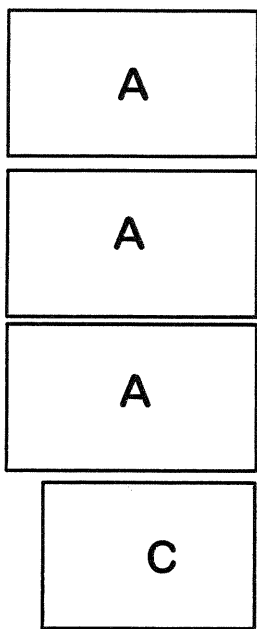

BOTTOM

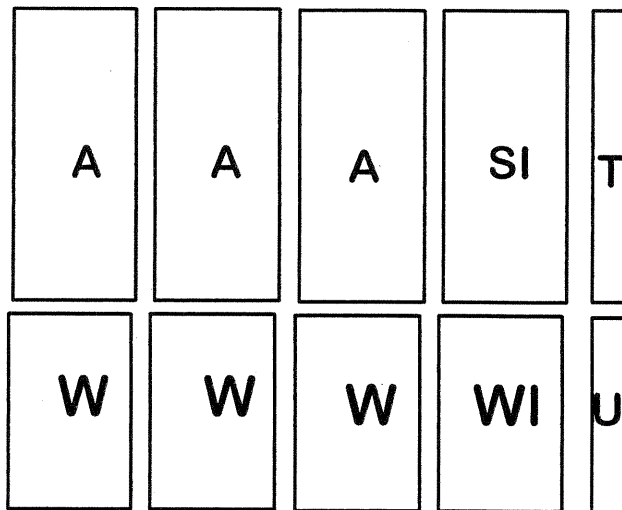


RIGHT SIDE

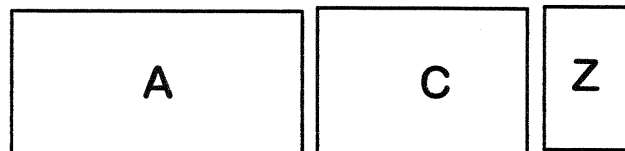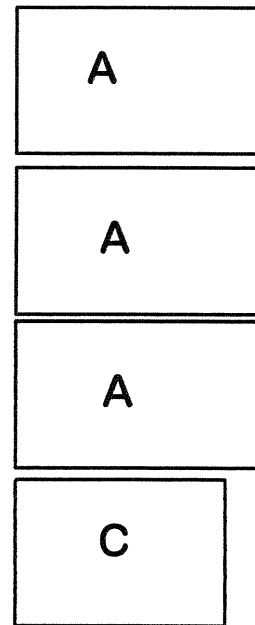

FRONT

PE 1003 (Classic) Brick Layout

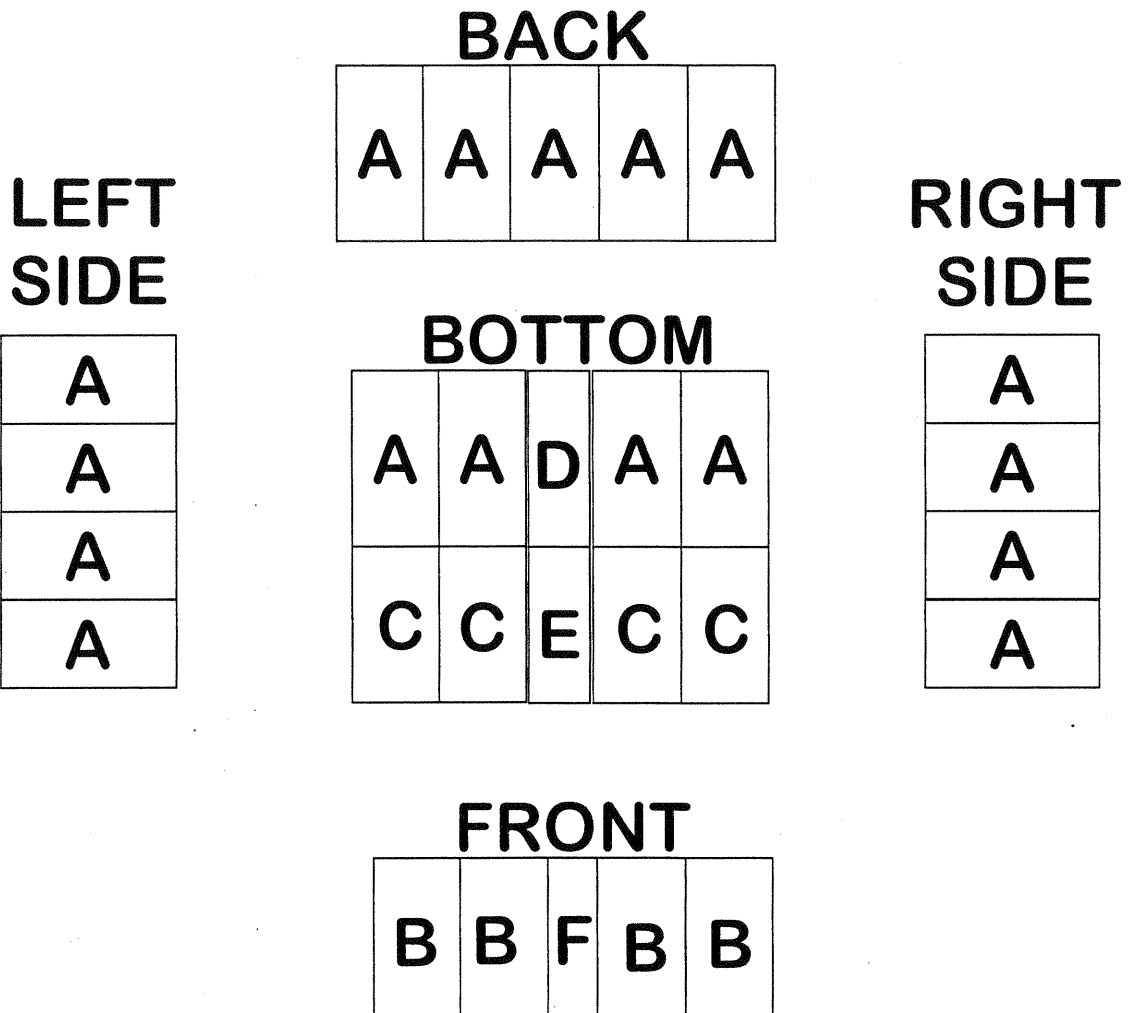

PEL 1006 (PARLOR) Brick Layout

BOTTOM 2nd Layer

A	A	N	A	A
I	I	N	I	I

BACK

A	A	A	A	A
---	---	---	---	---

LEFT SIDE

A
A
A
A

RIGHT SIDE

A
A
A
A

BOTTOM

A	K	O	K	A
C	L	G	L	C

FRONT

B	B	F	B	B
---	---	---	---	---

PE 1006 (Classic) Brick Layout

BOTTOM 2nd Layer

A	A	H	A	A
I	I	J	I	I

BACK

A	A	A	A	A
---	---	---	---	---

LEFT SIDE

A
A
A
A

BOTTOM

A	A	D	A	A
C	C	E	C	C

RIGHT SIDE


A
A
A
A

FRONT

B	B	F	B	B
---	---	---	---	---



PT 1003 Brick layout

BACK

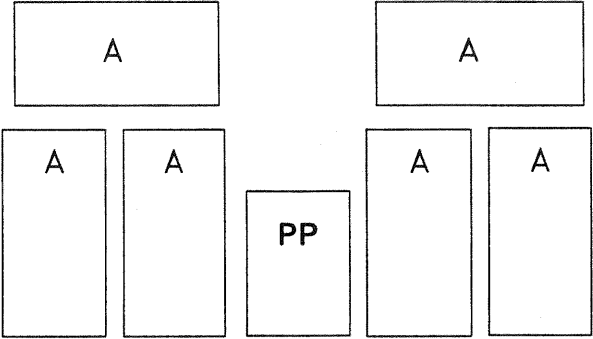

LEFT SIDE

RIGHT SIDE

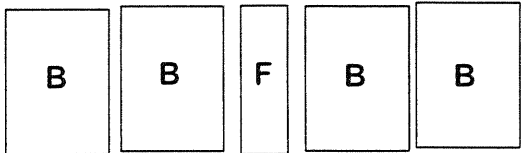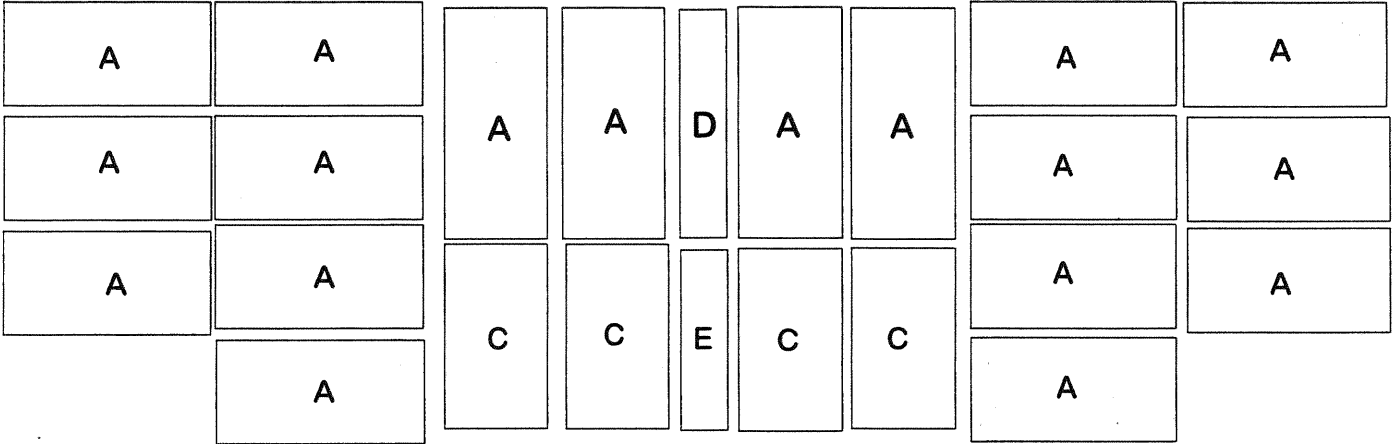

FRONT

BAFFLE

